



PHASE I SOUTH TOWER LEVEL 9 (ALTERNATE)






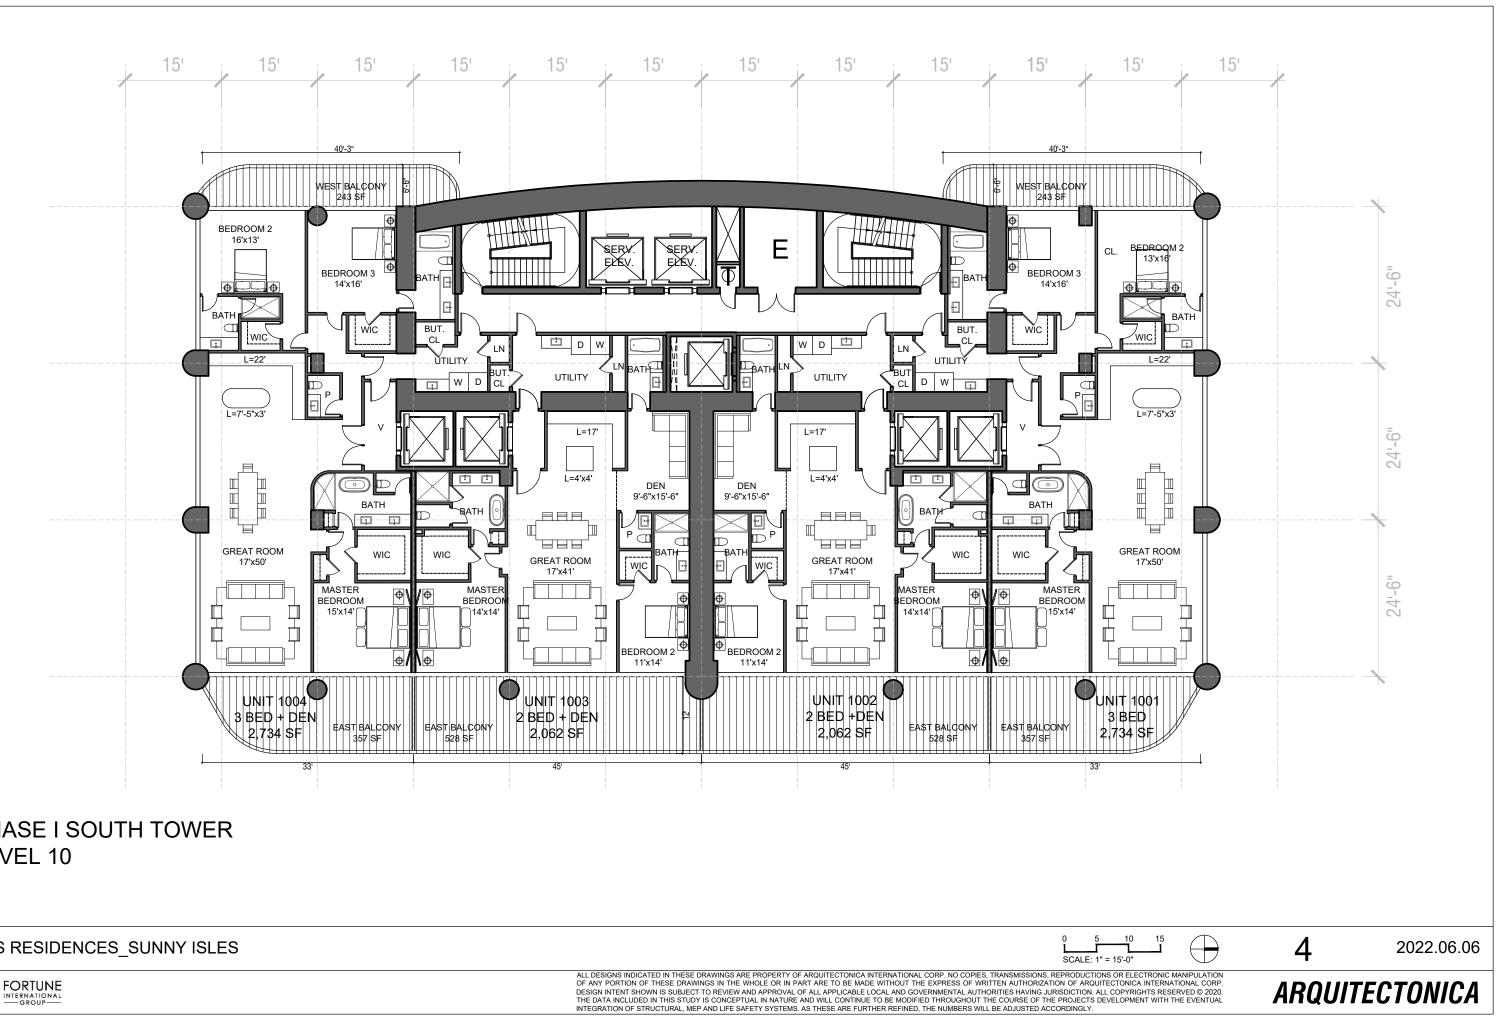


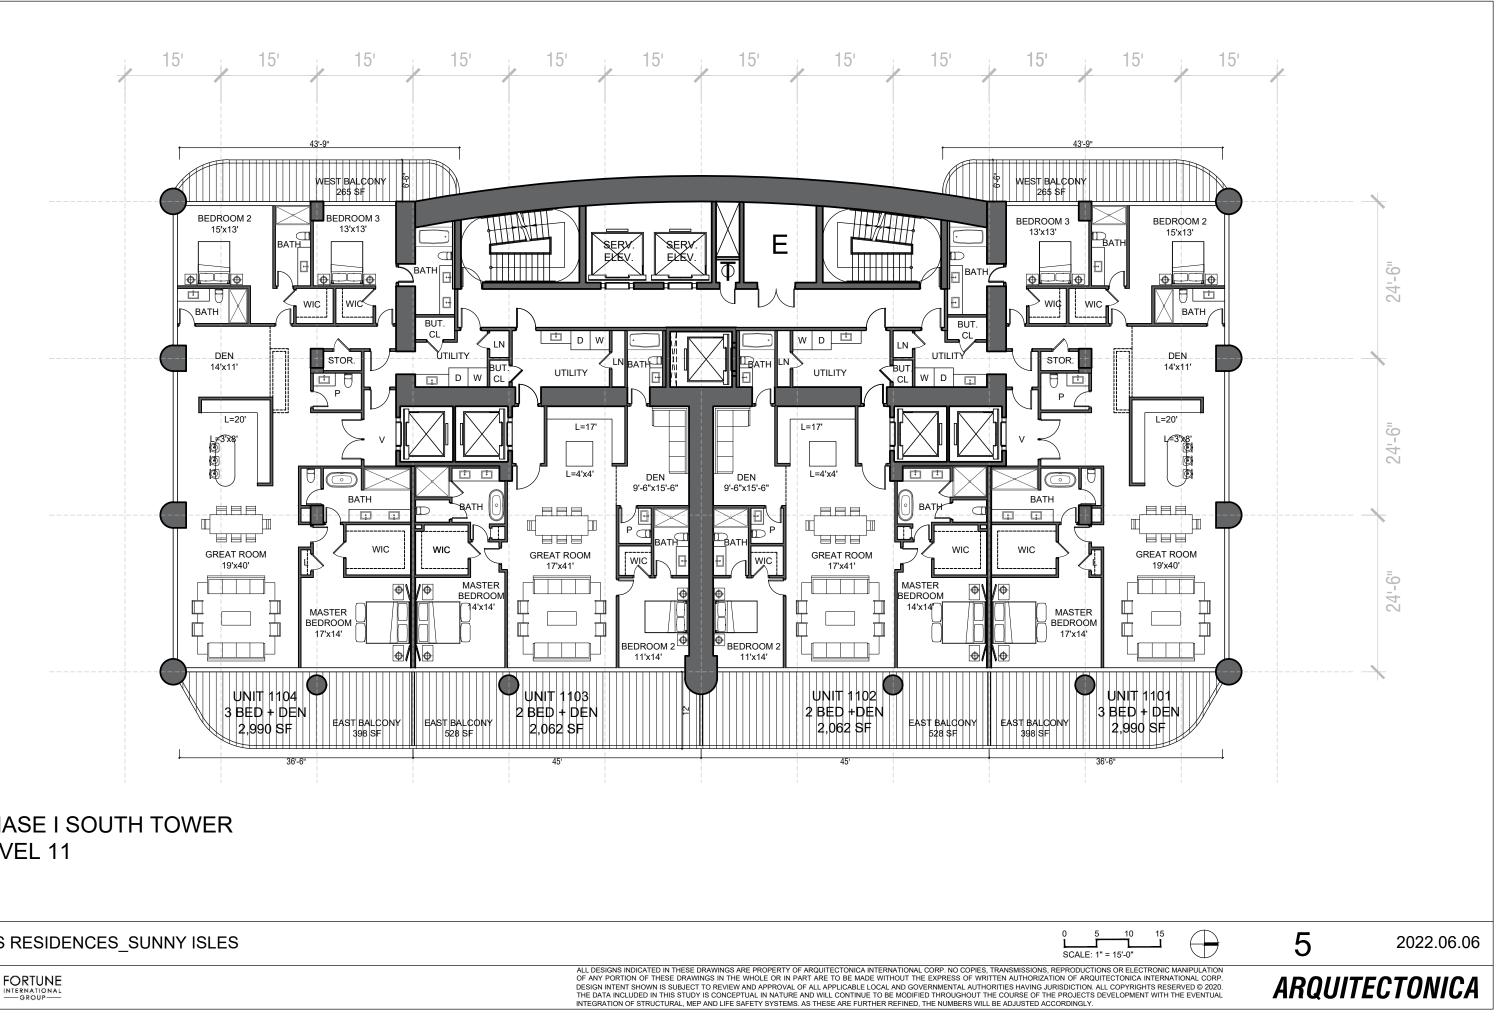




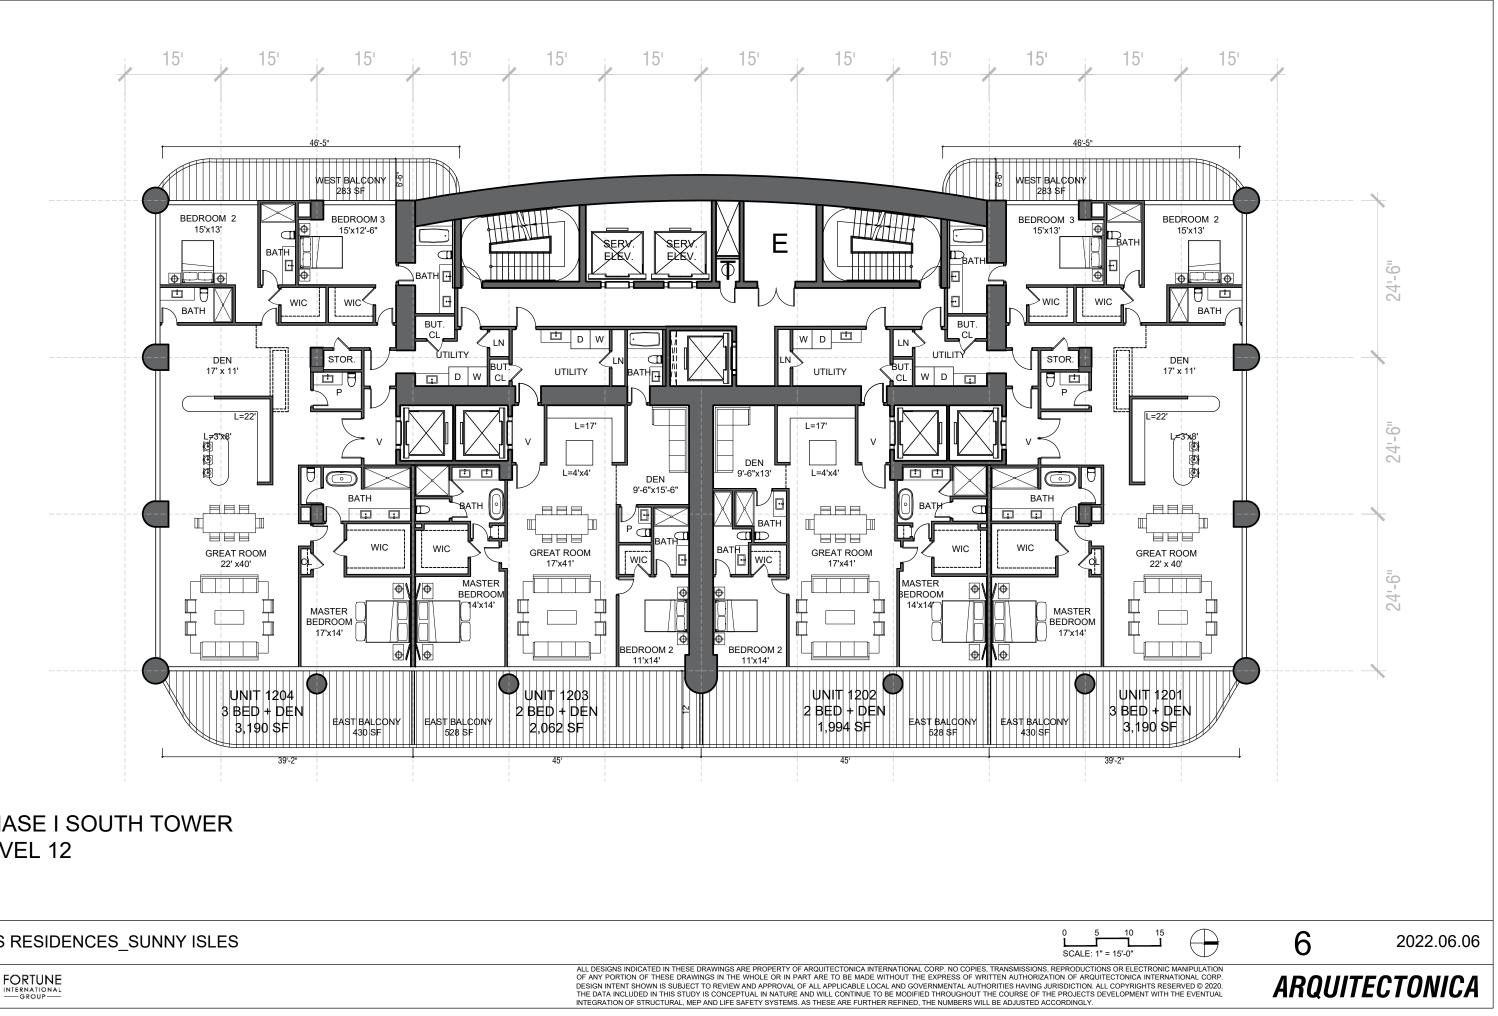




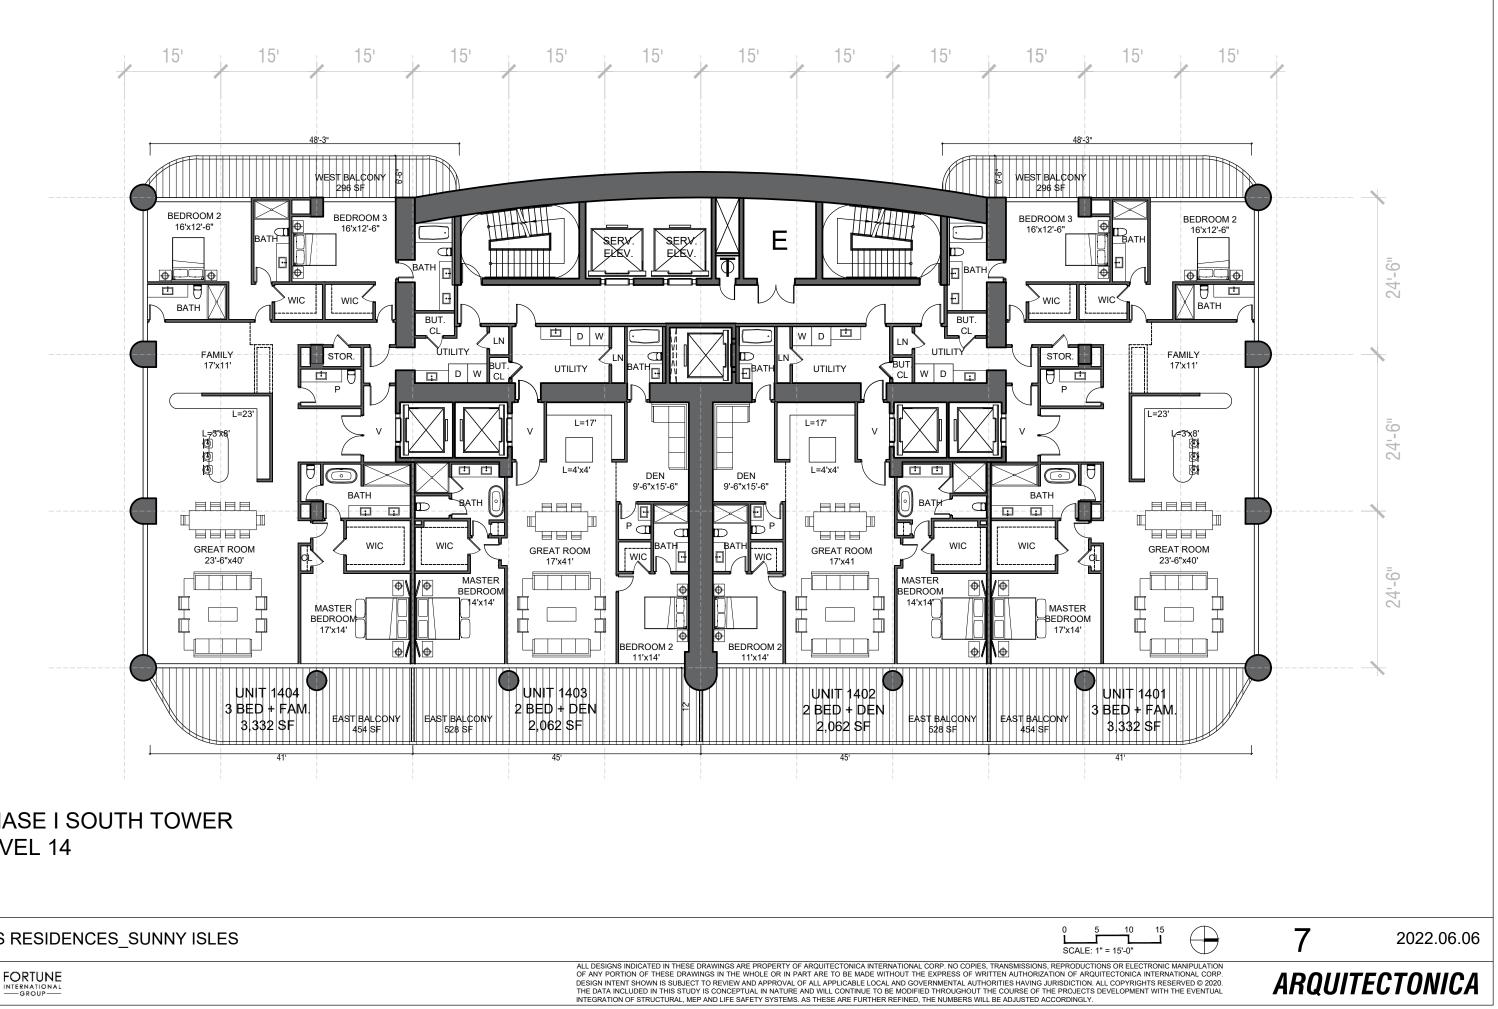




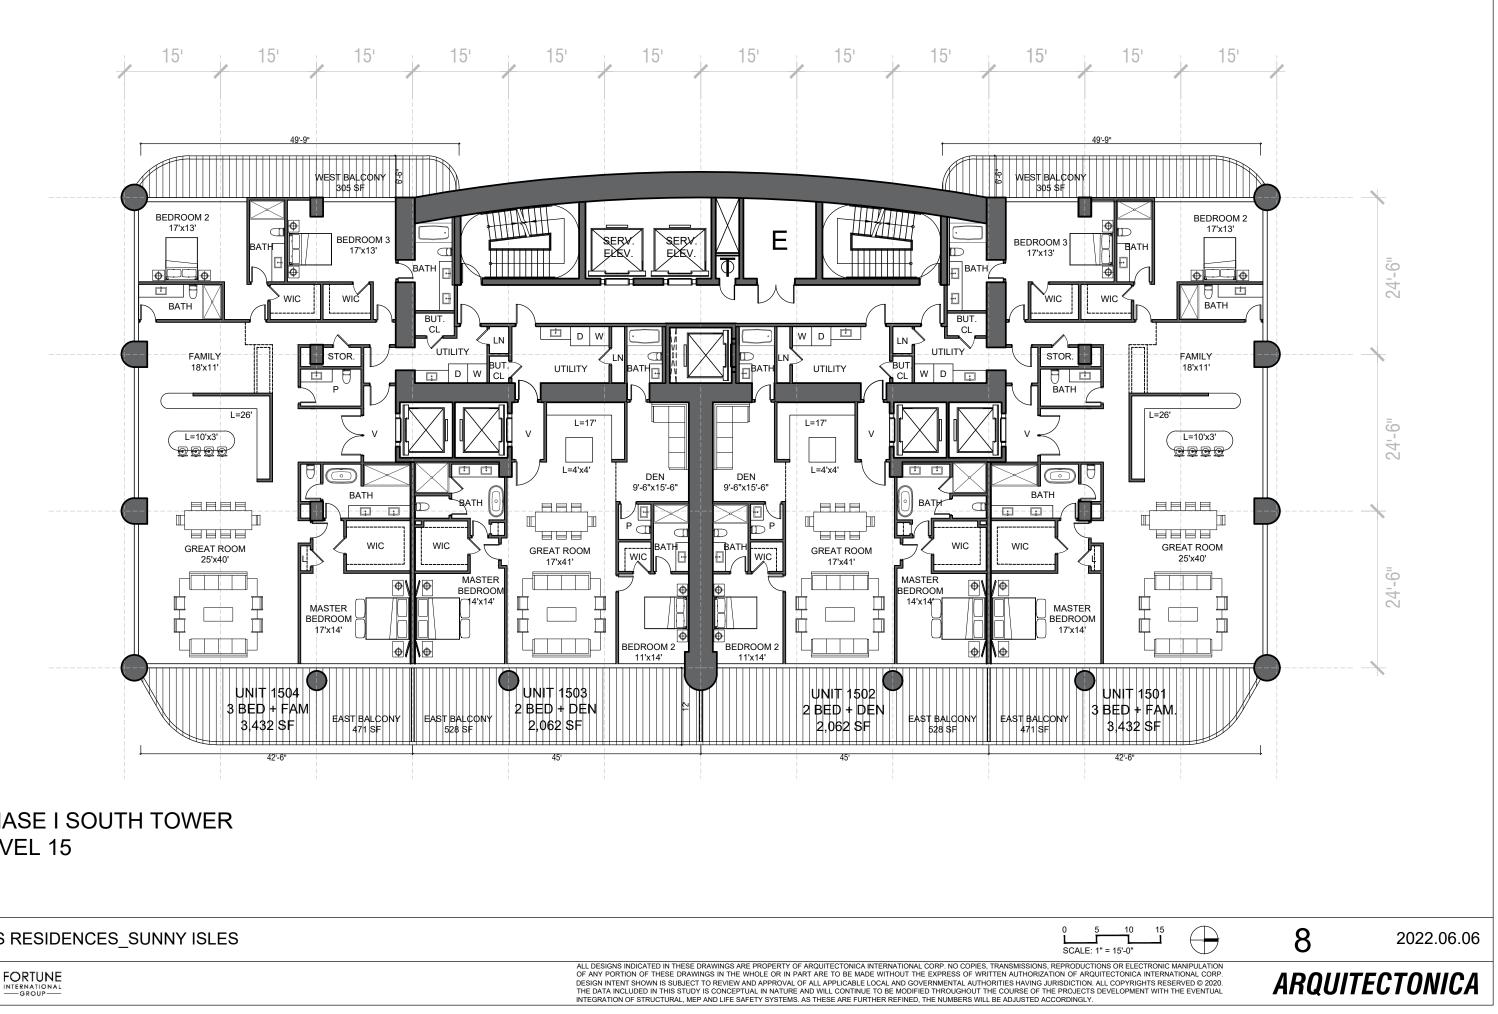




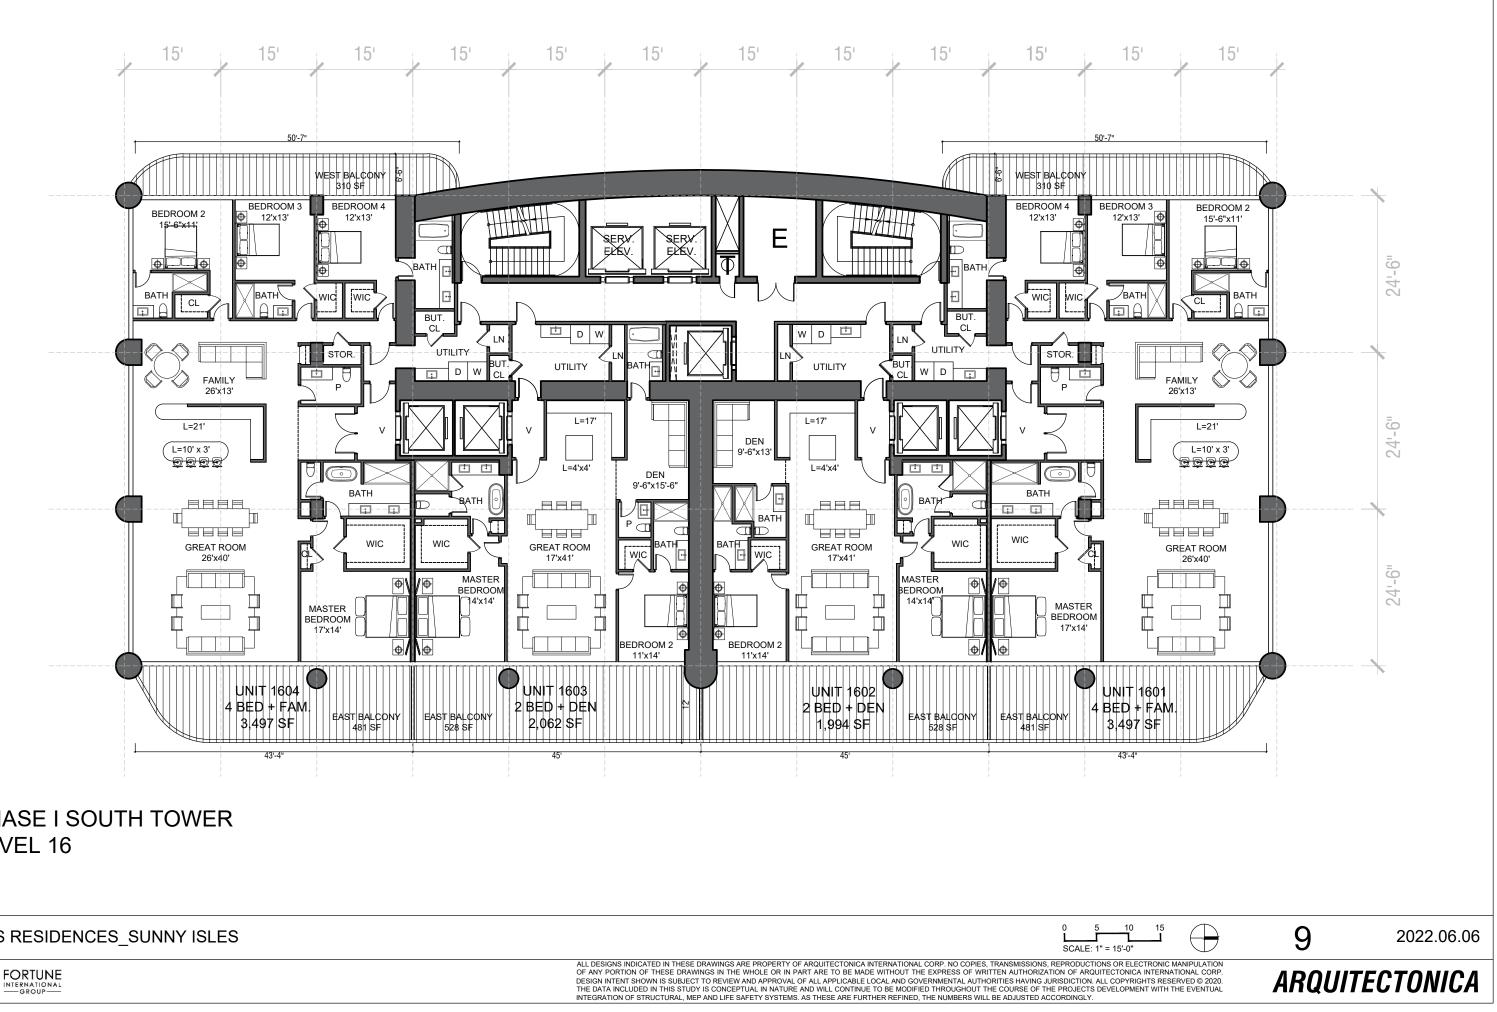




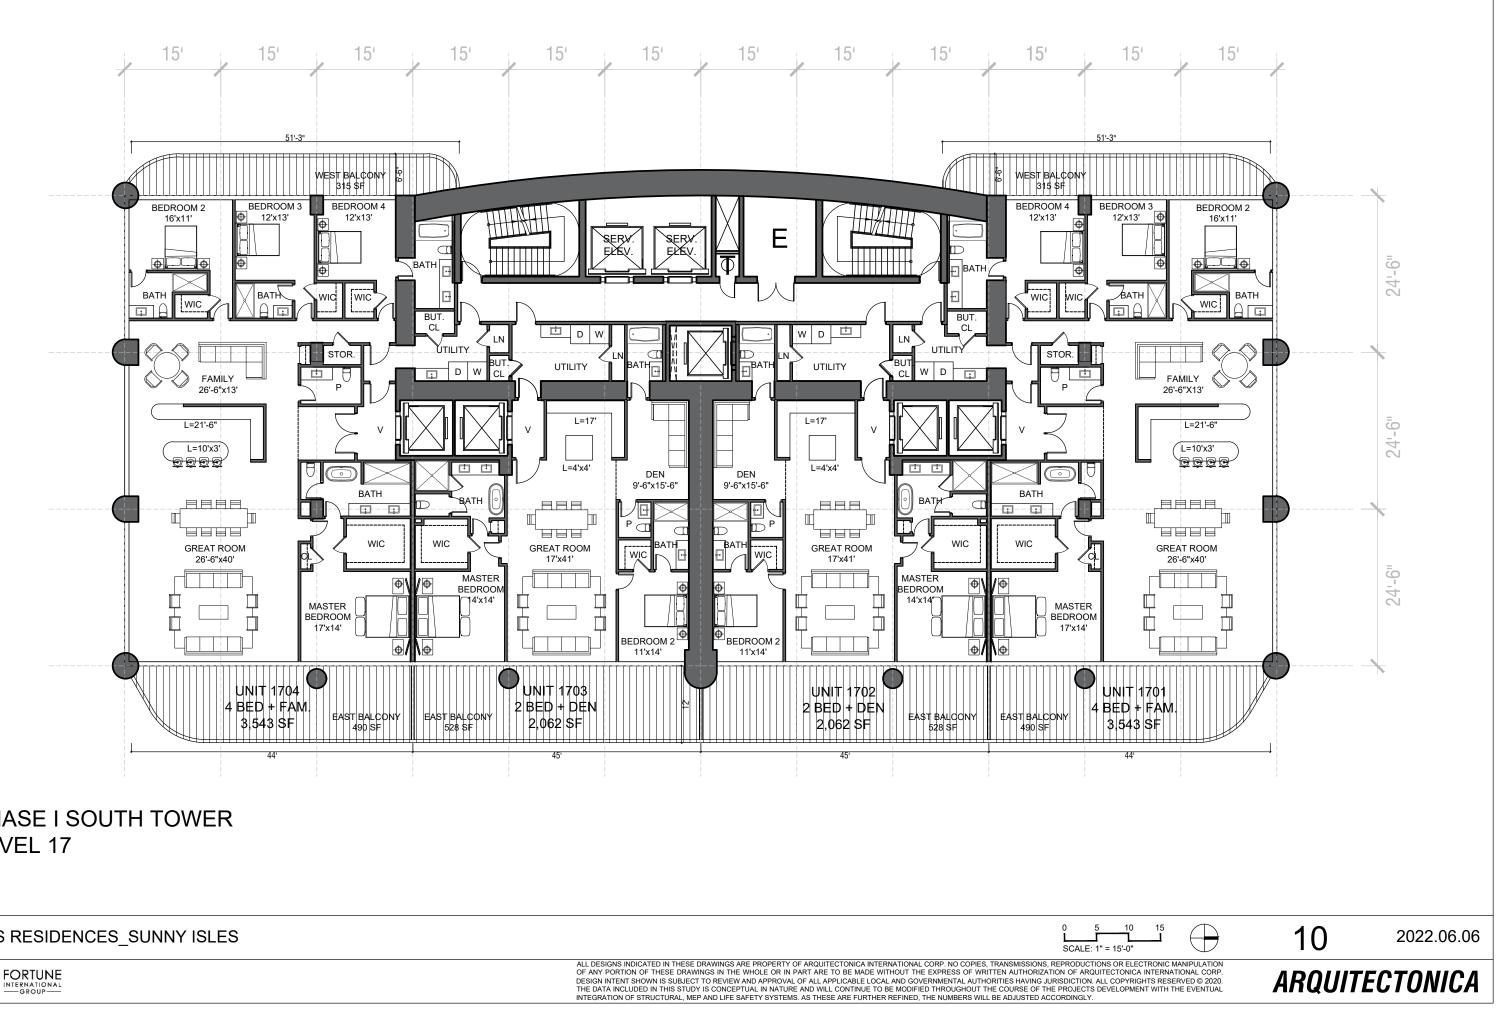




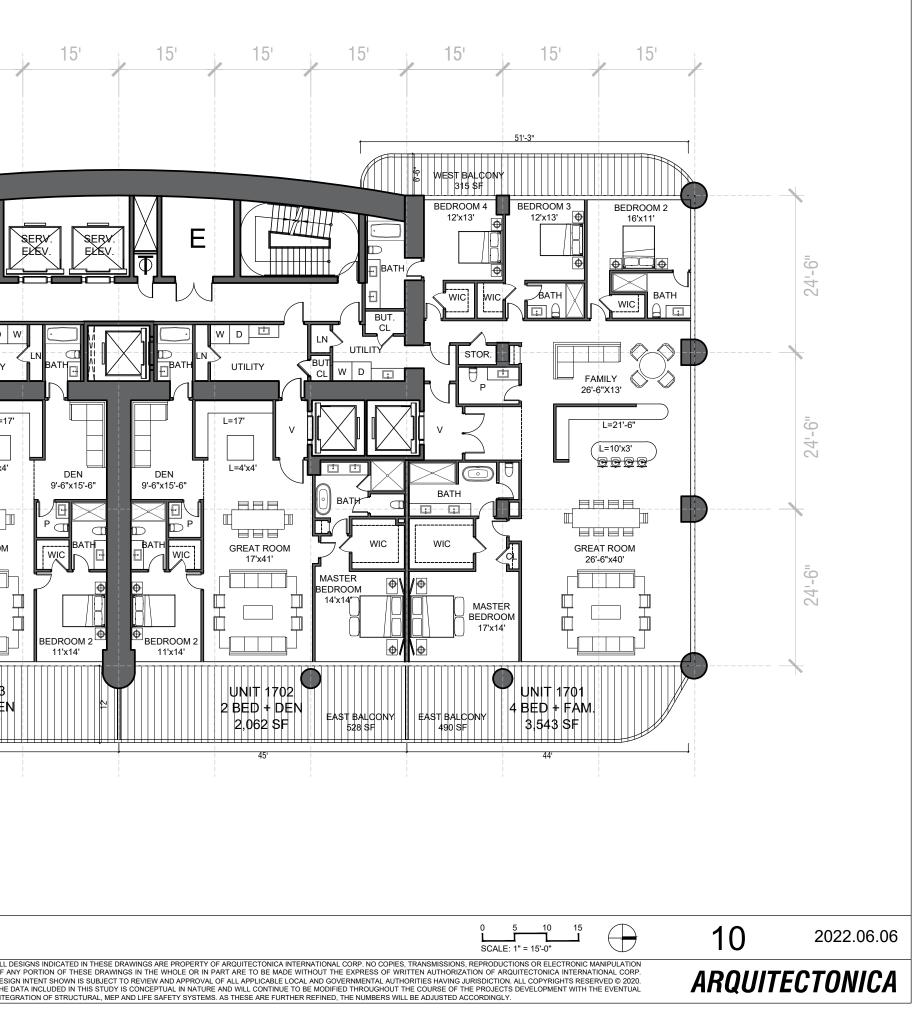

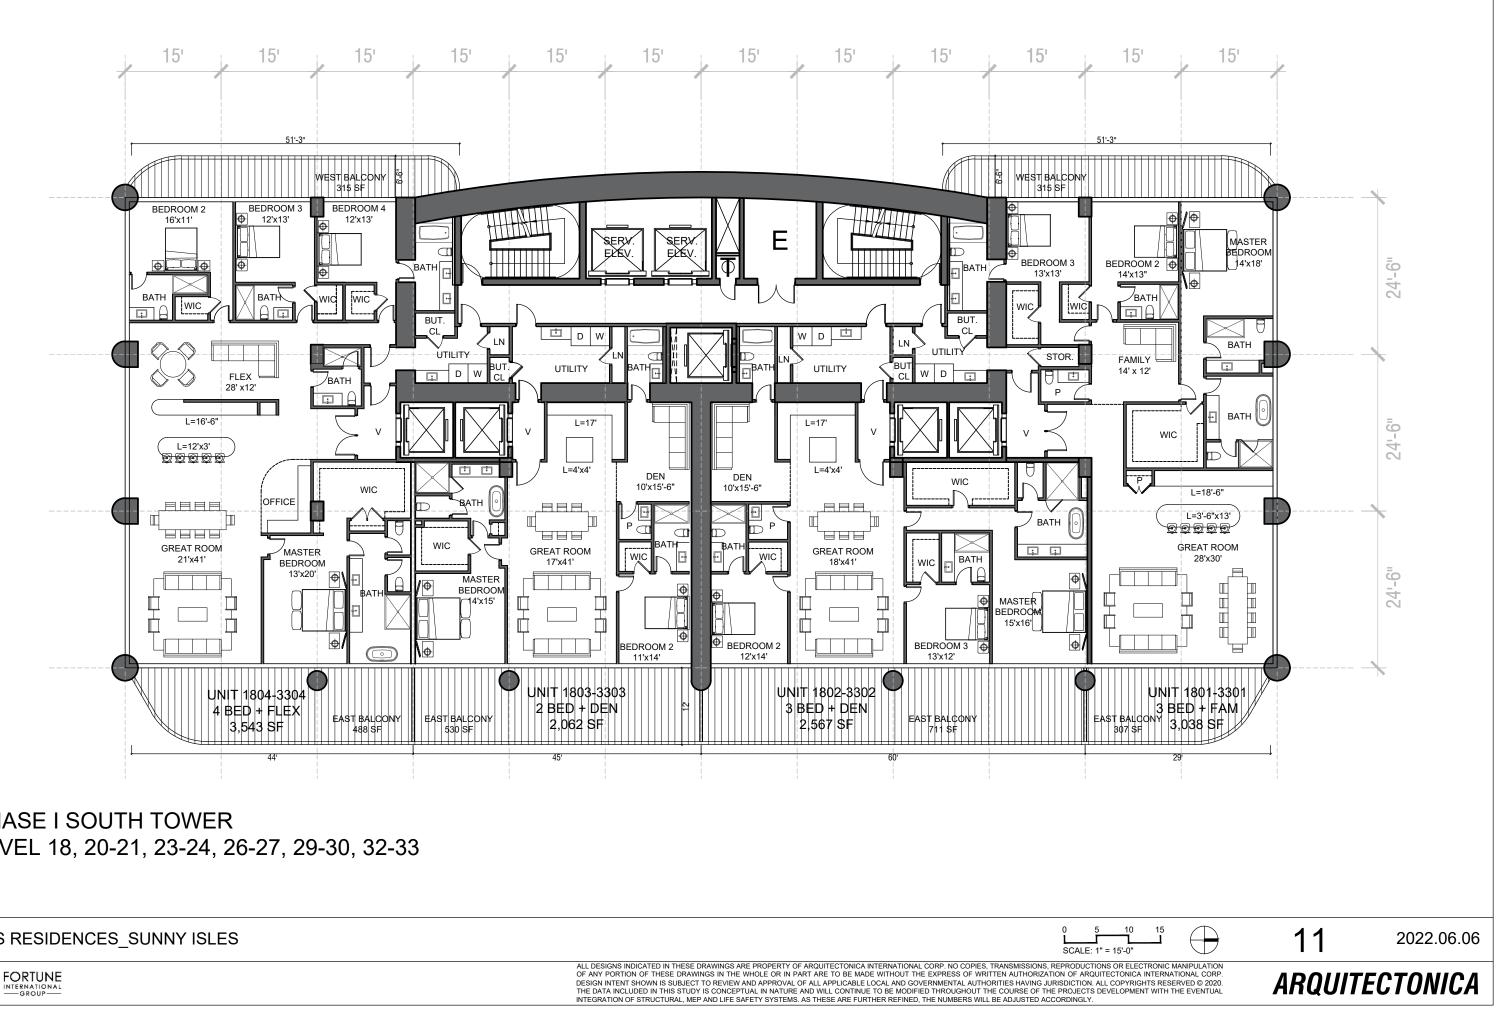


PHASE I SOUTH TOWER LEVEL 18, 20-21, 23-24, 26-27, 29-30, 32-33



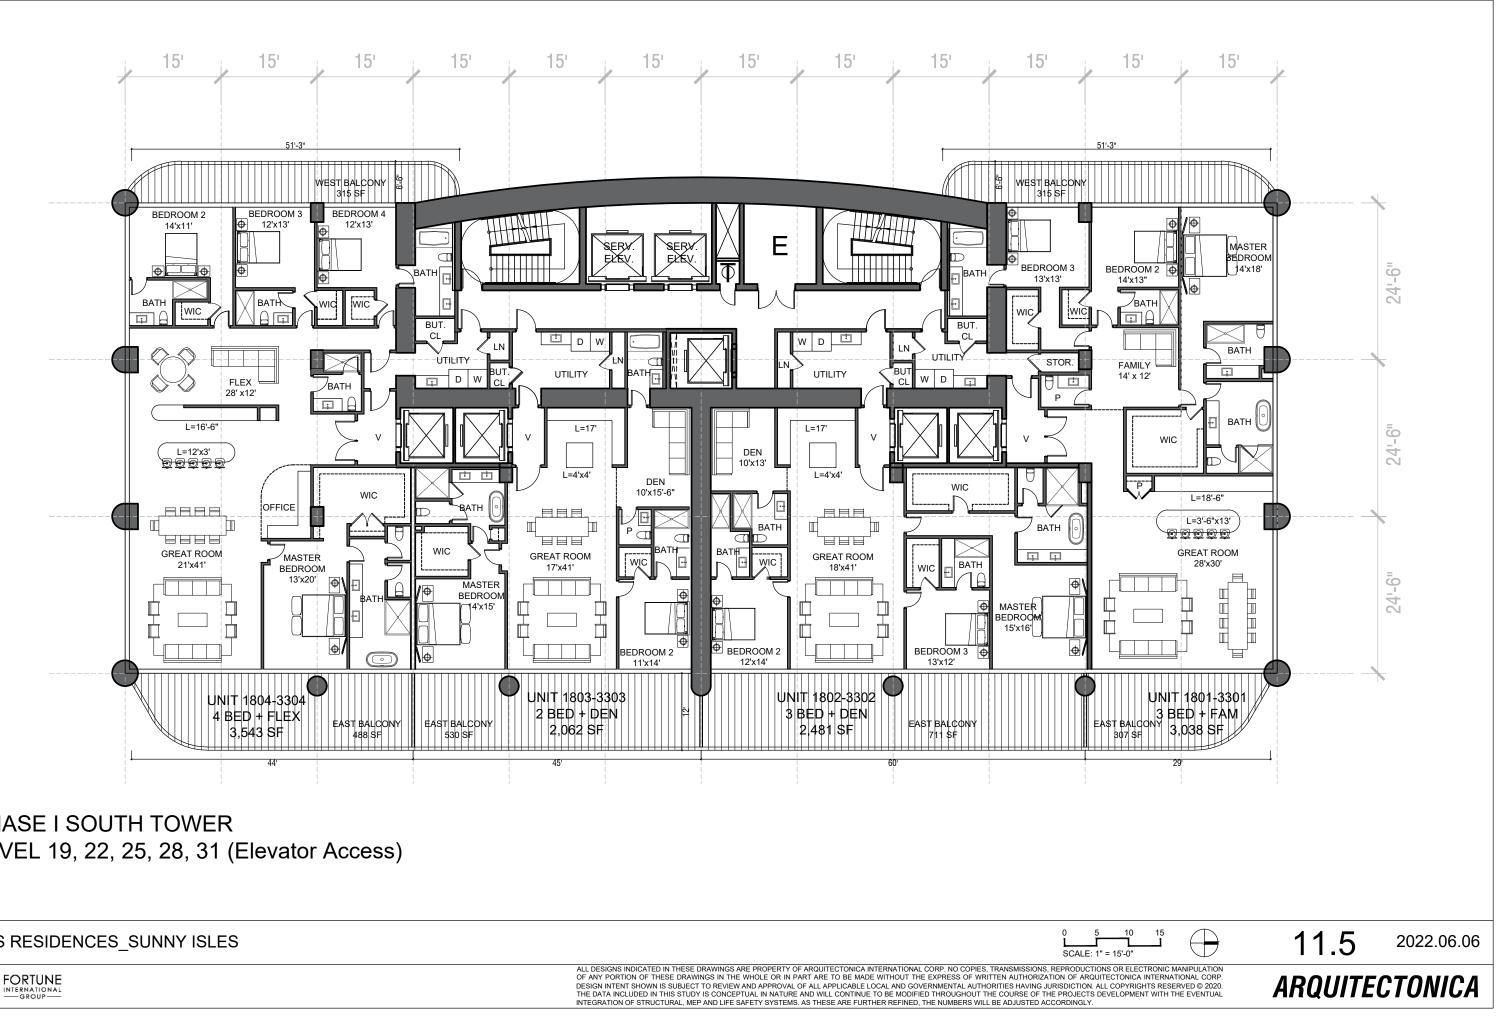


PHASE I SOUTH TOWER LEVEL 19, 22, 25, 28, 31 (Elevator Access)



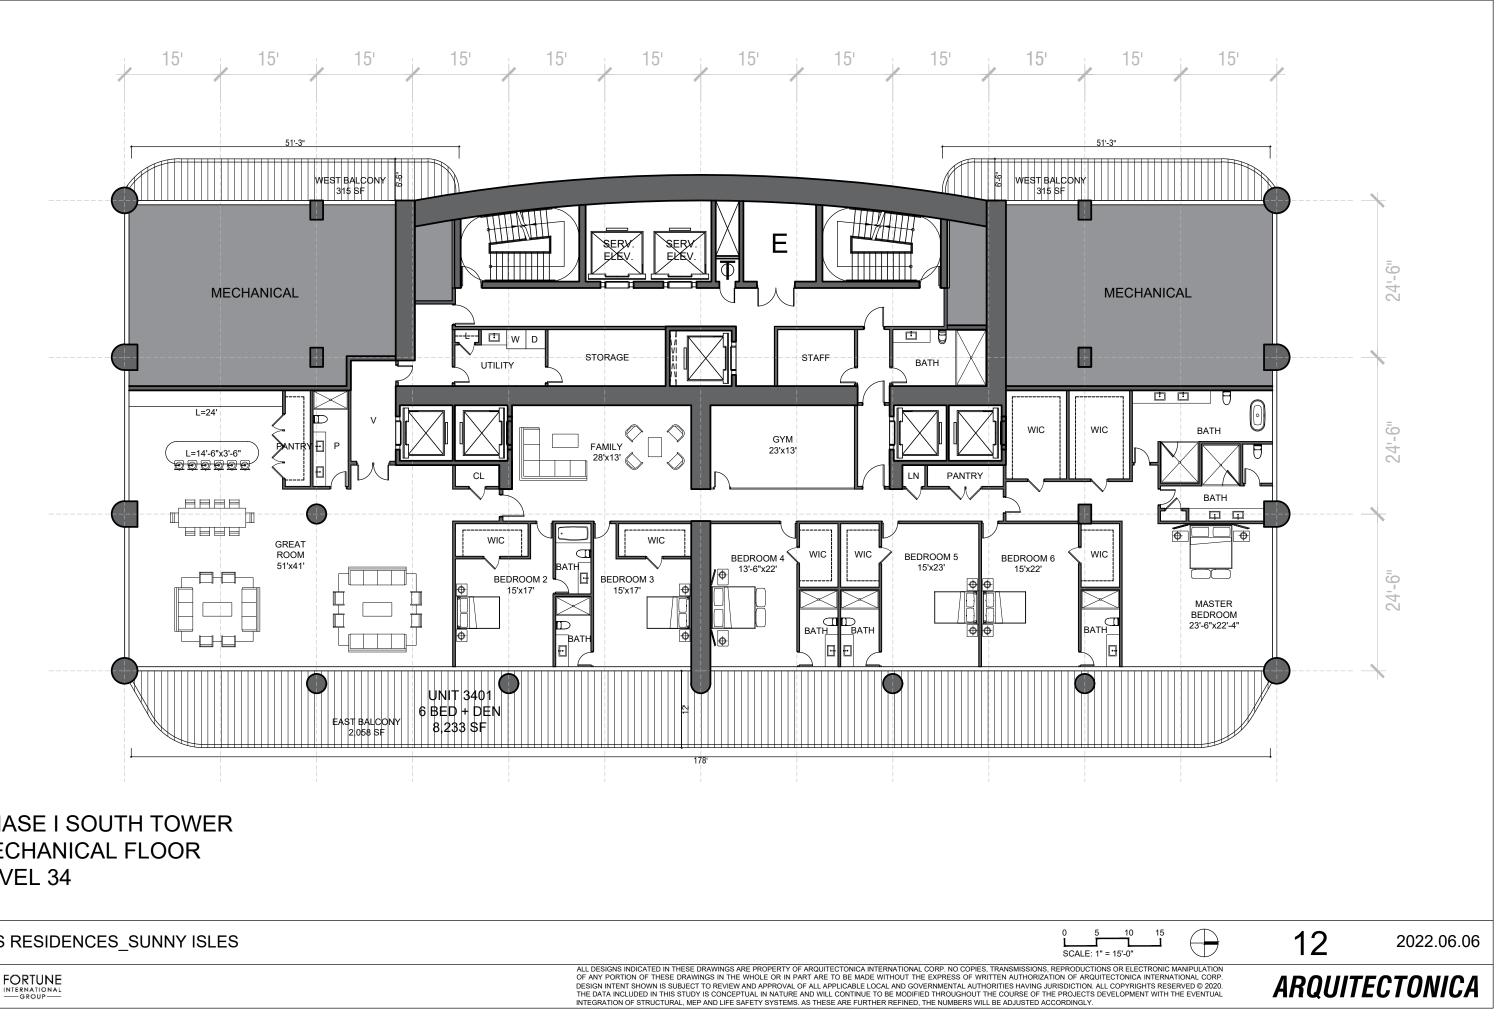


PHASE I SOUTH TOWER MECHANICAL FLOOR LEVEL 34



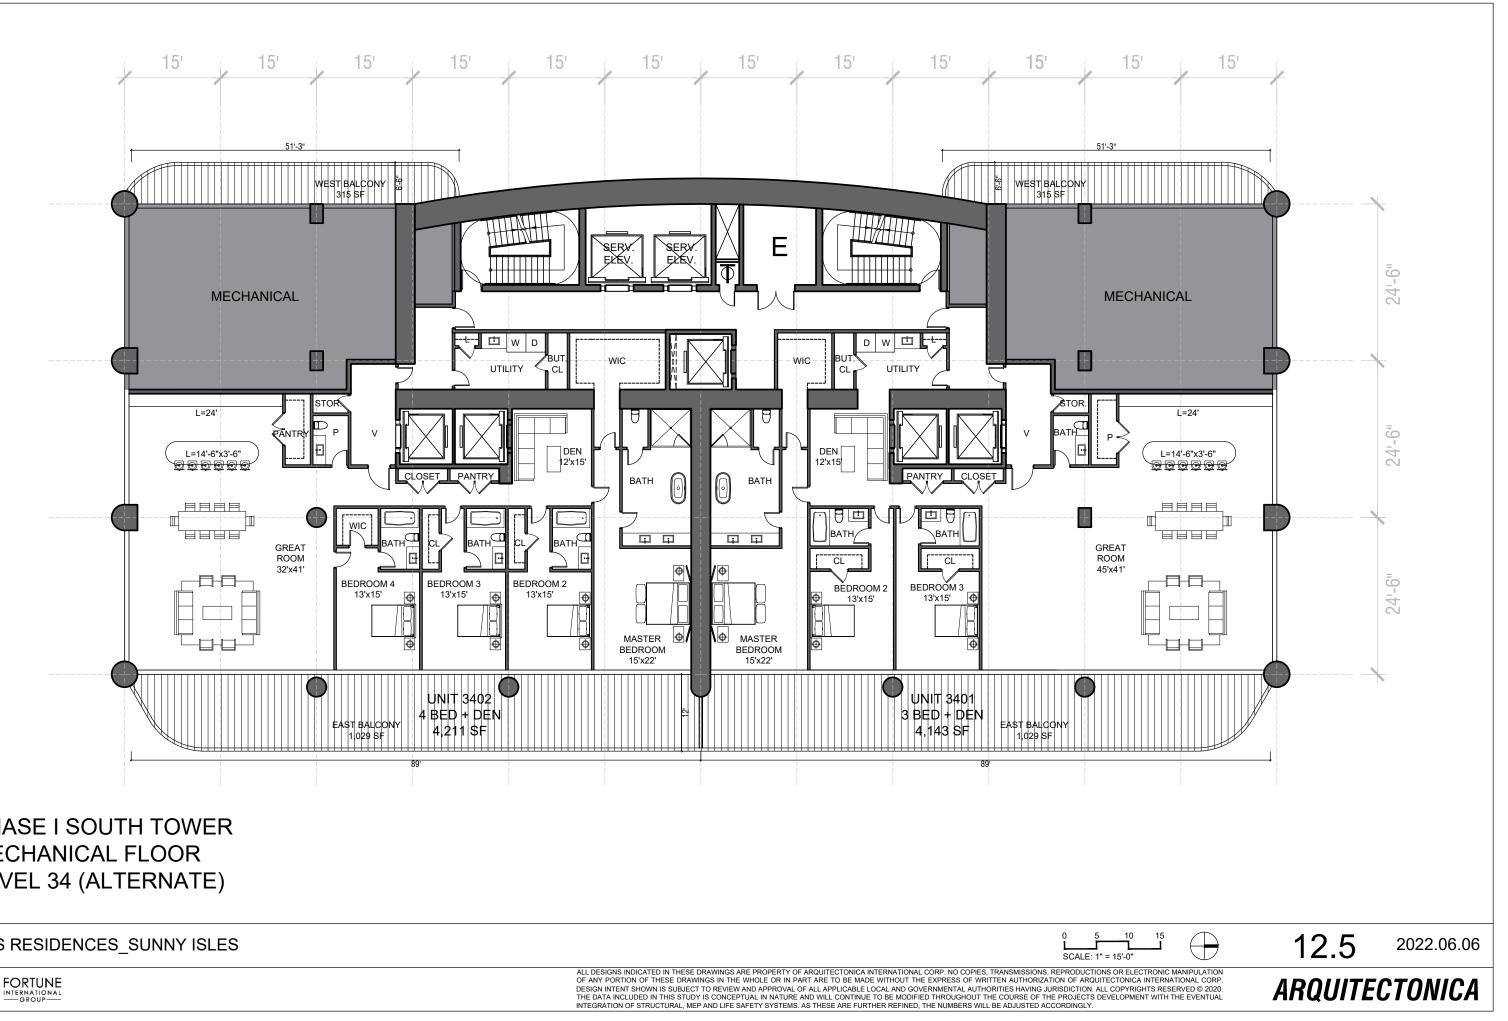


PHASE I SOUTH TOWER MECHANICAL FLOOR LEVEL 34 (ALTERNATE)



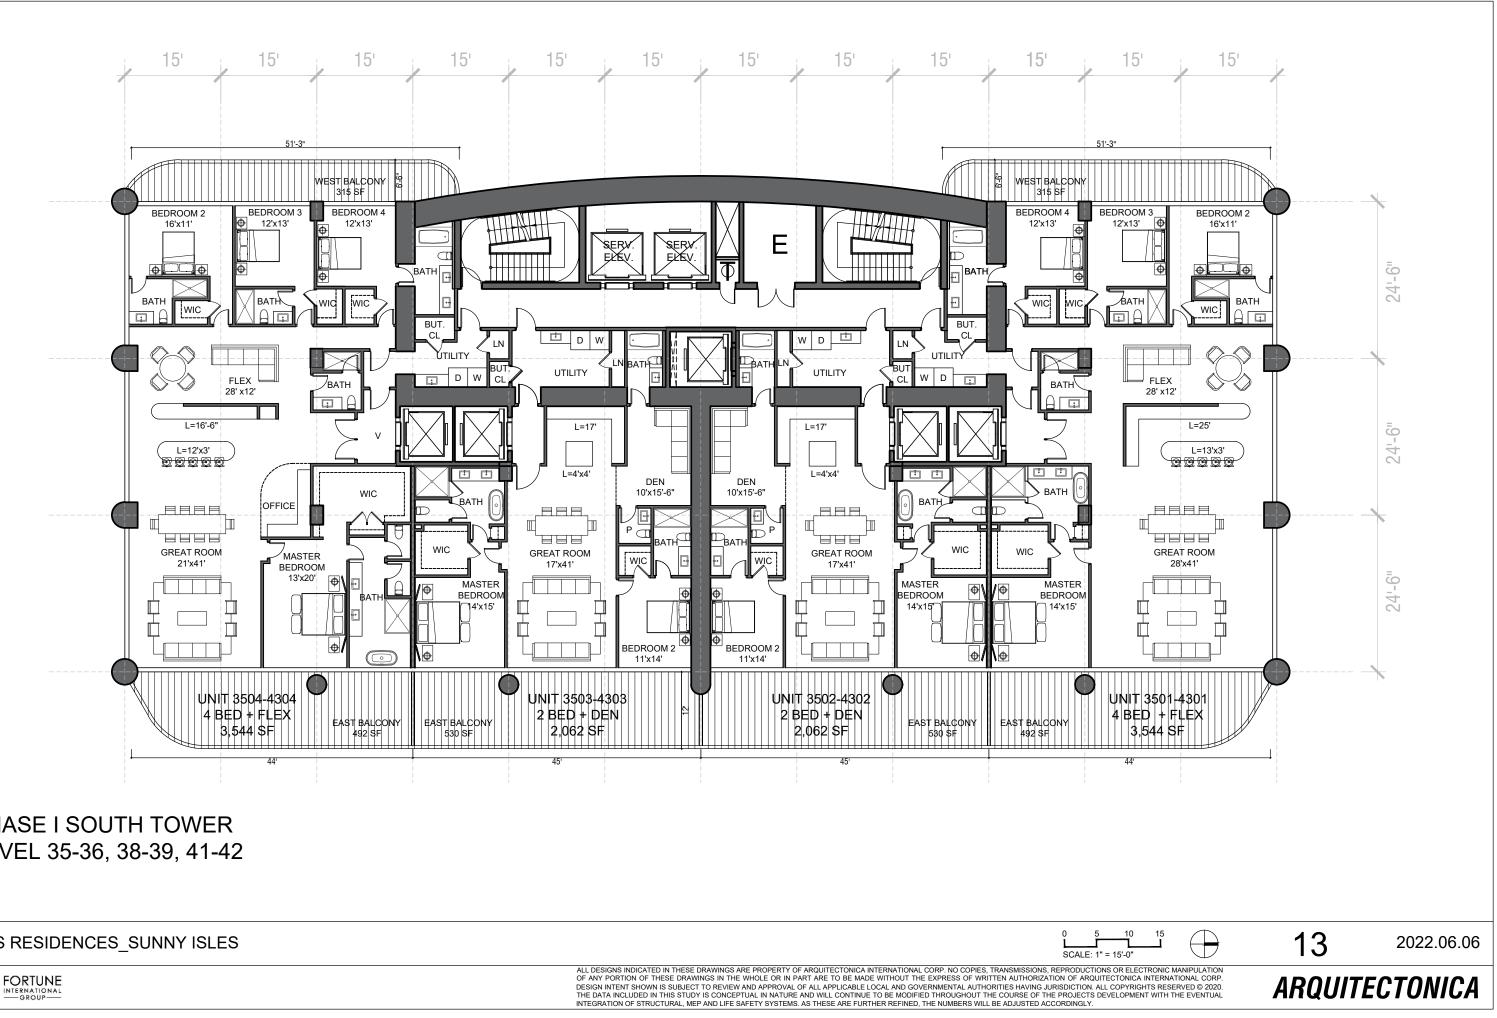


PHASE I SOUTH TOWER LEVEL 35-36, 38-39, 41-42



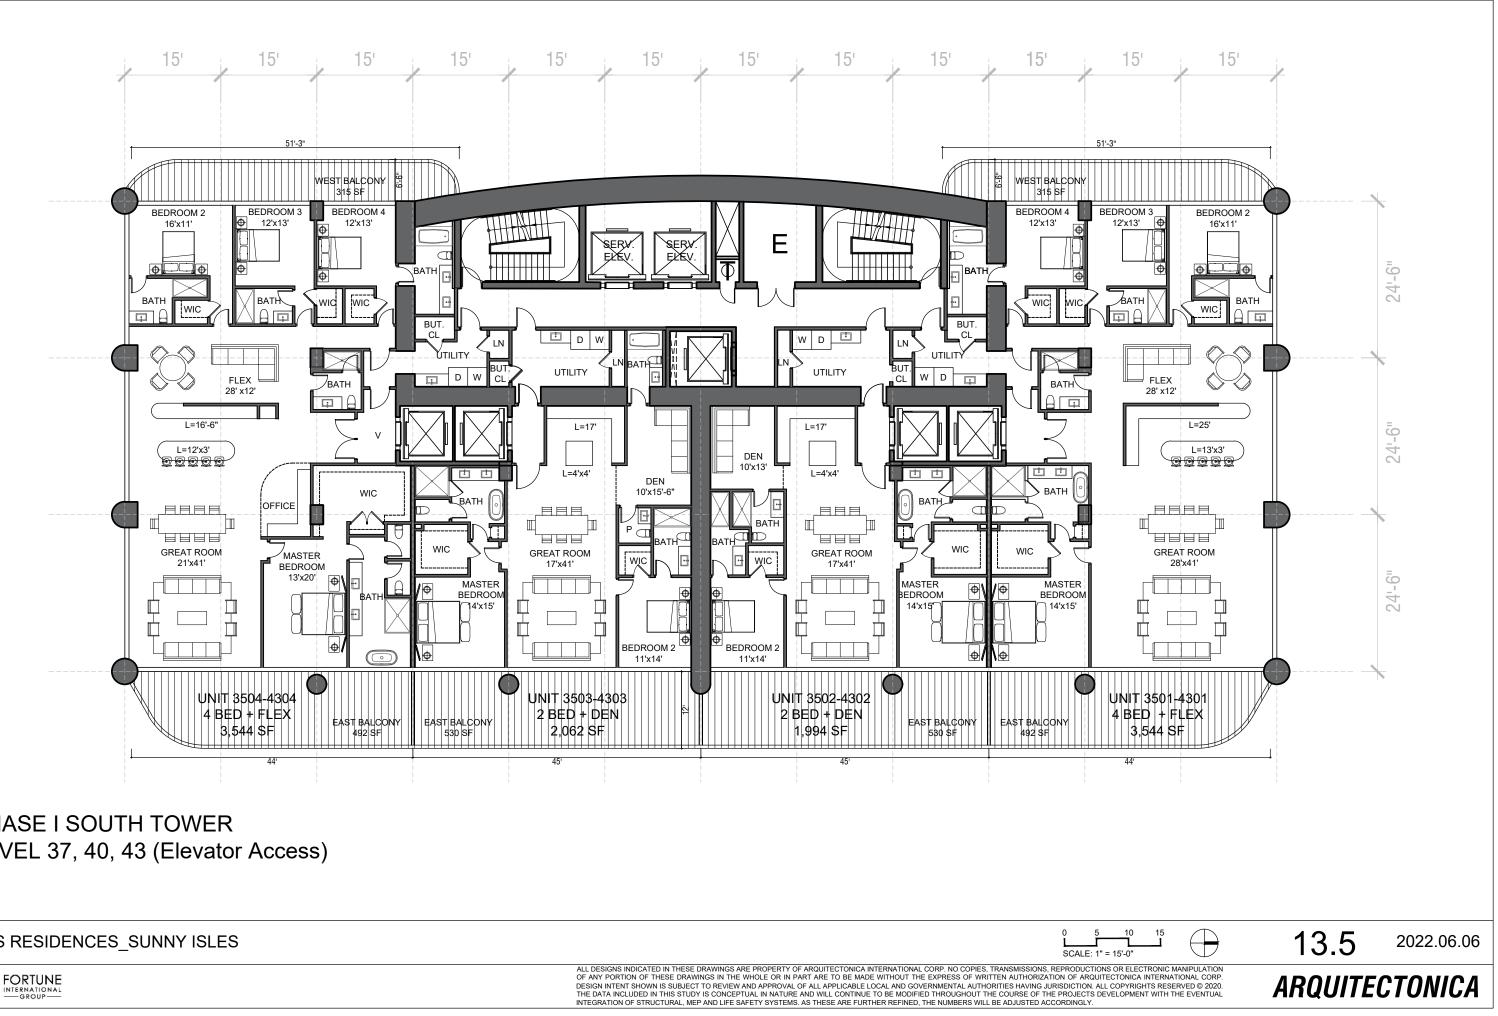

PHASE I SOUTH TOWER LEVEL 37, 40, 43 (Elevator Access)



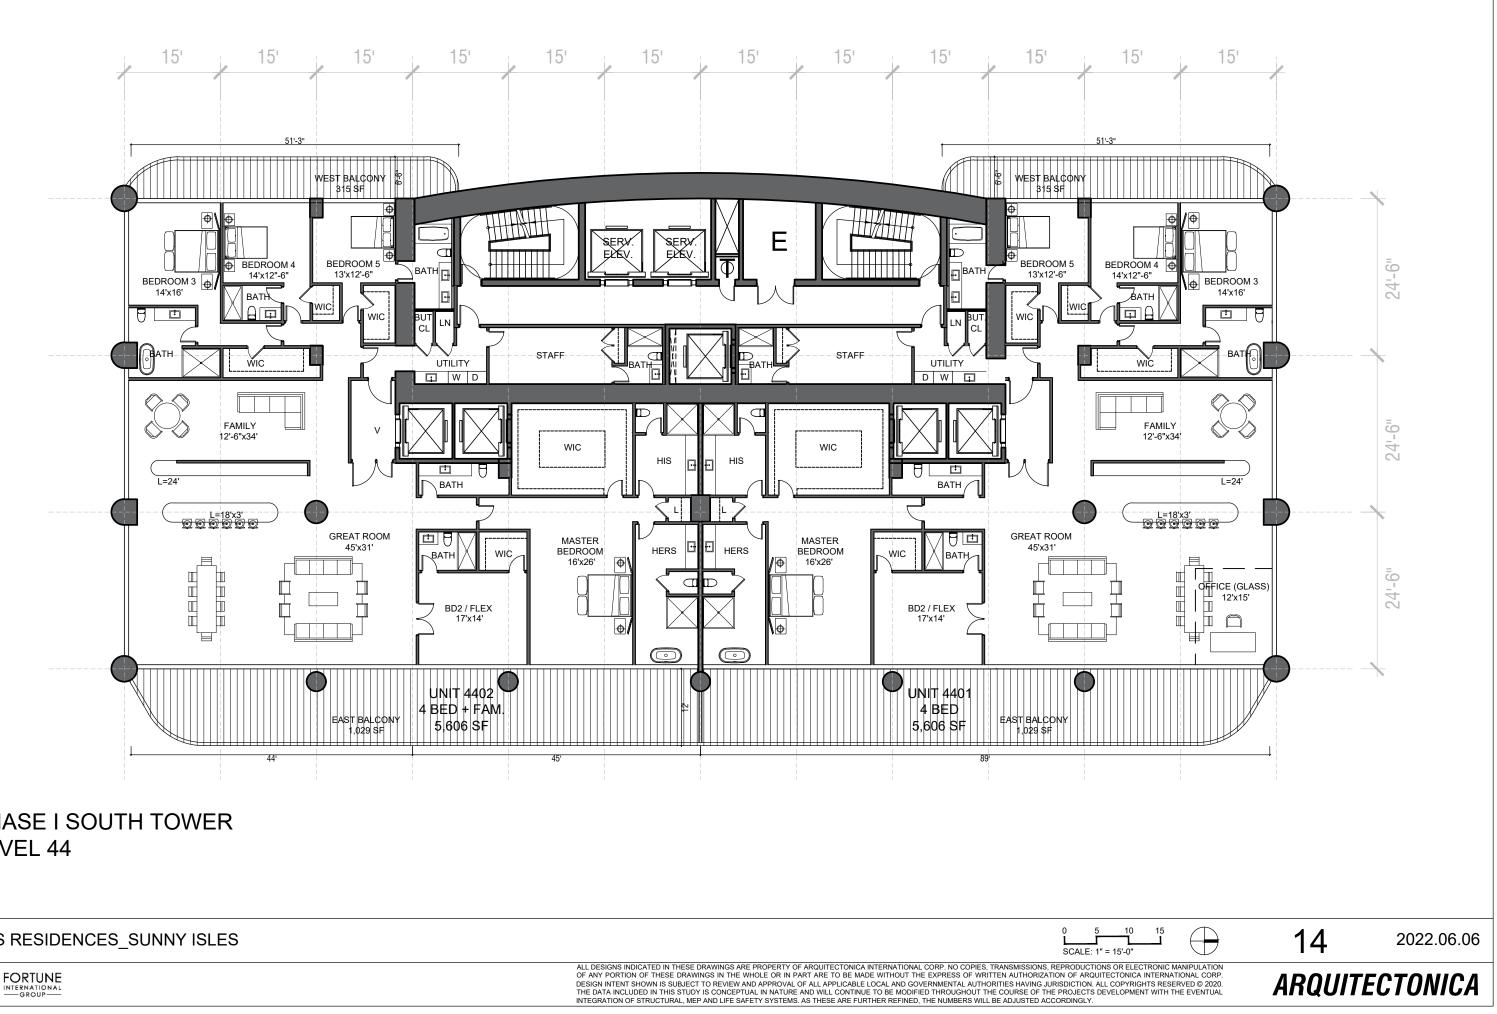














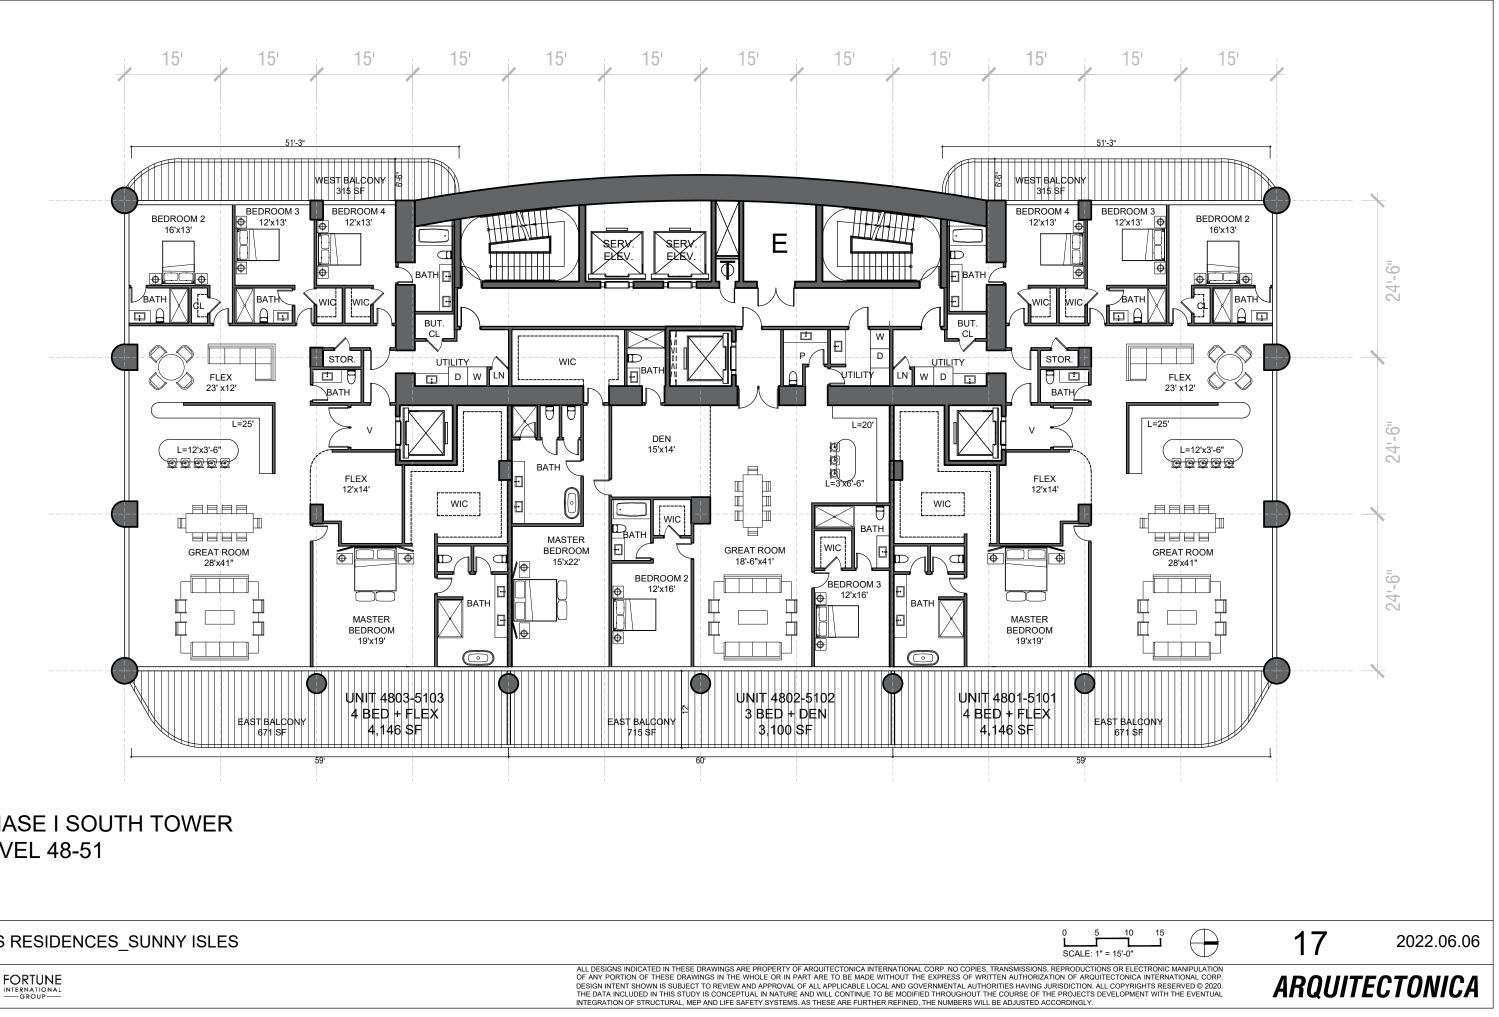




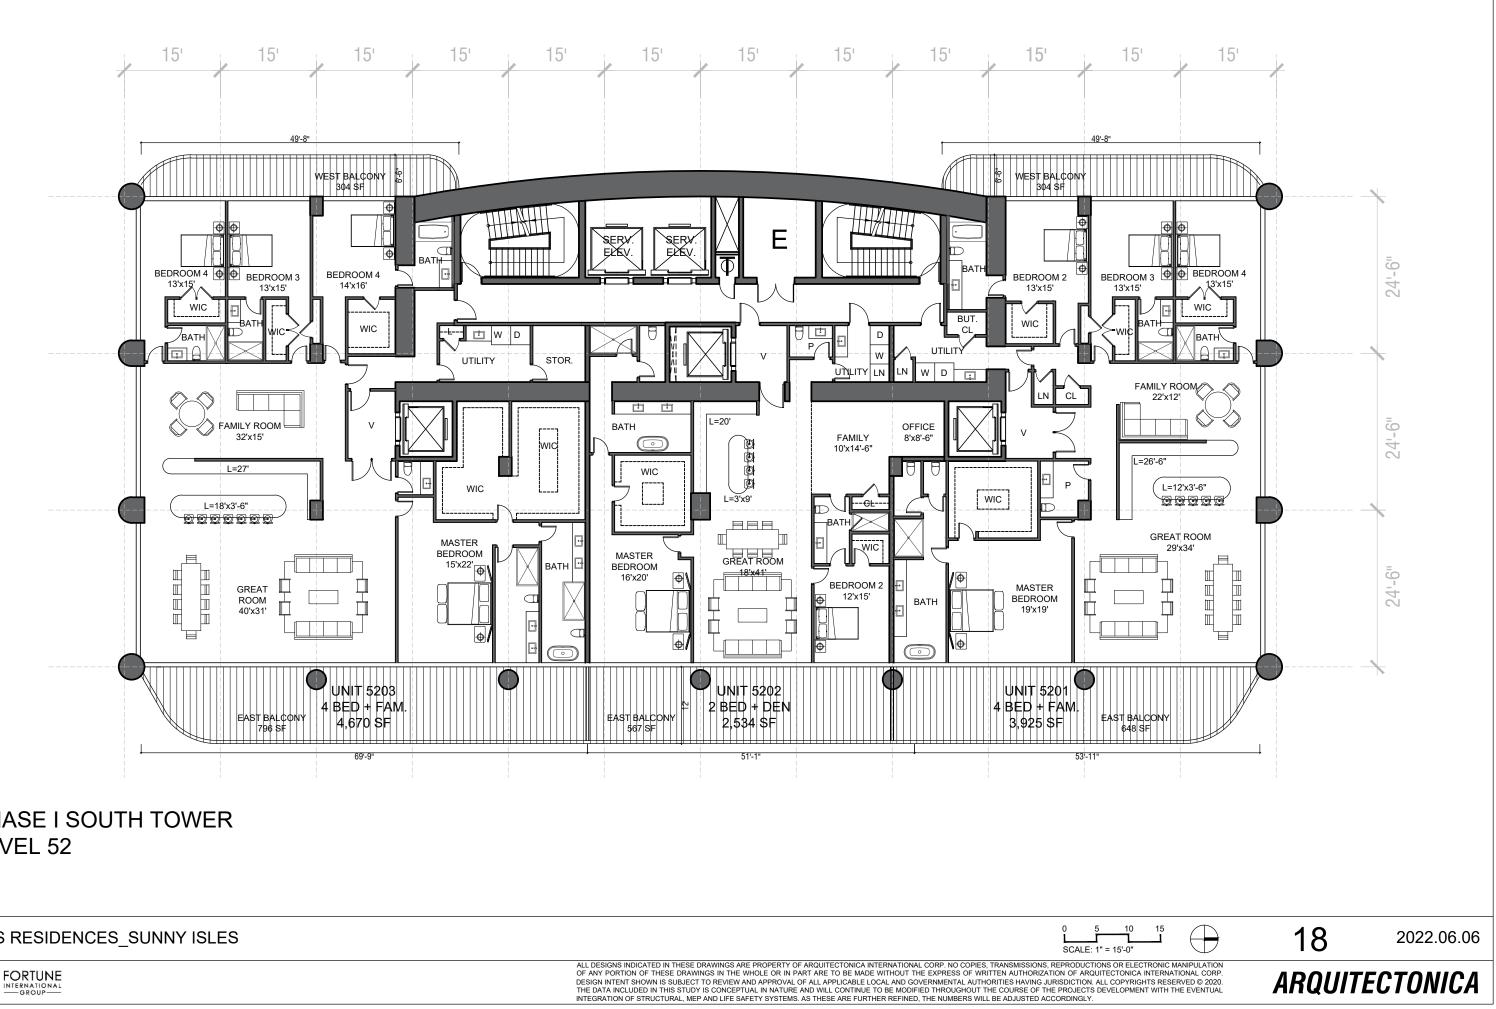




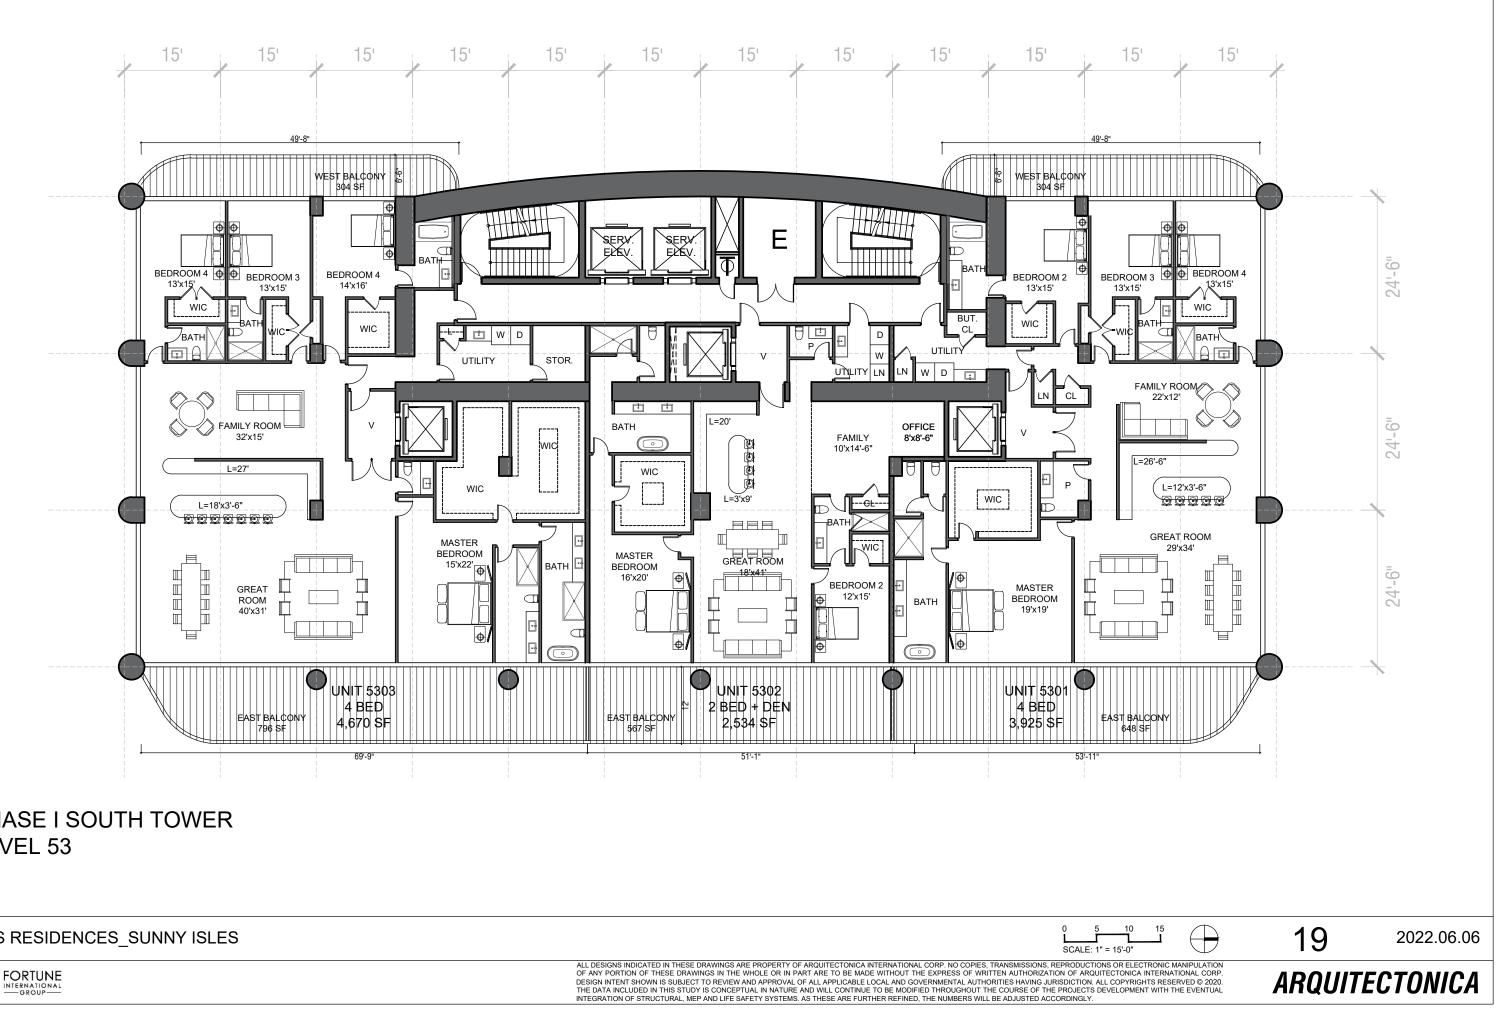




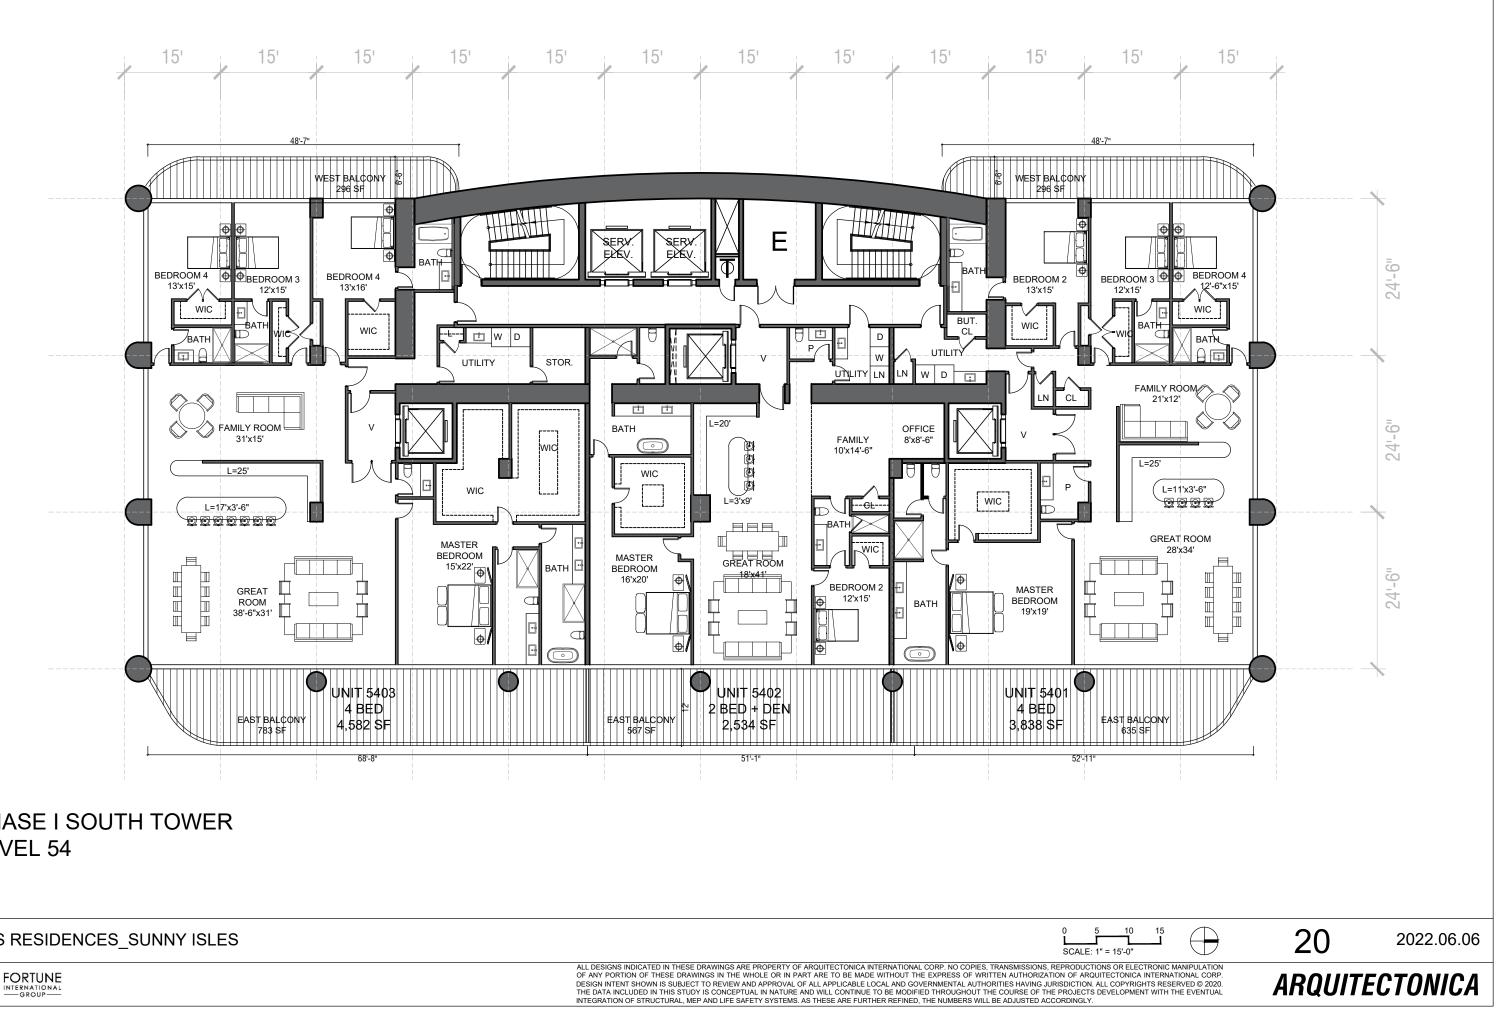




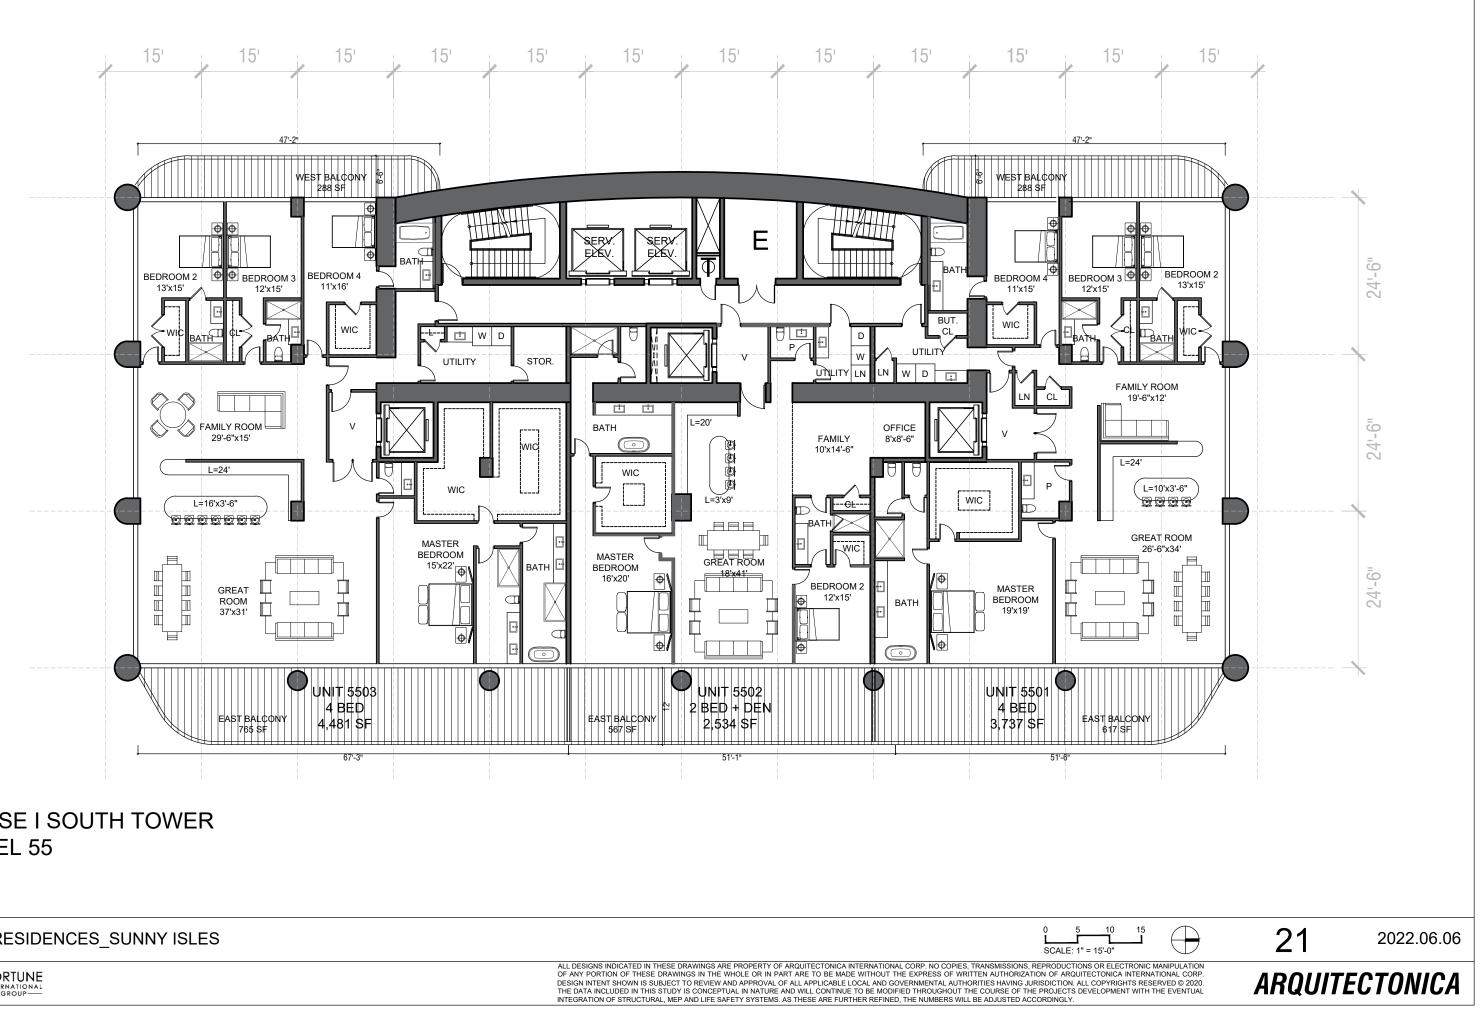




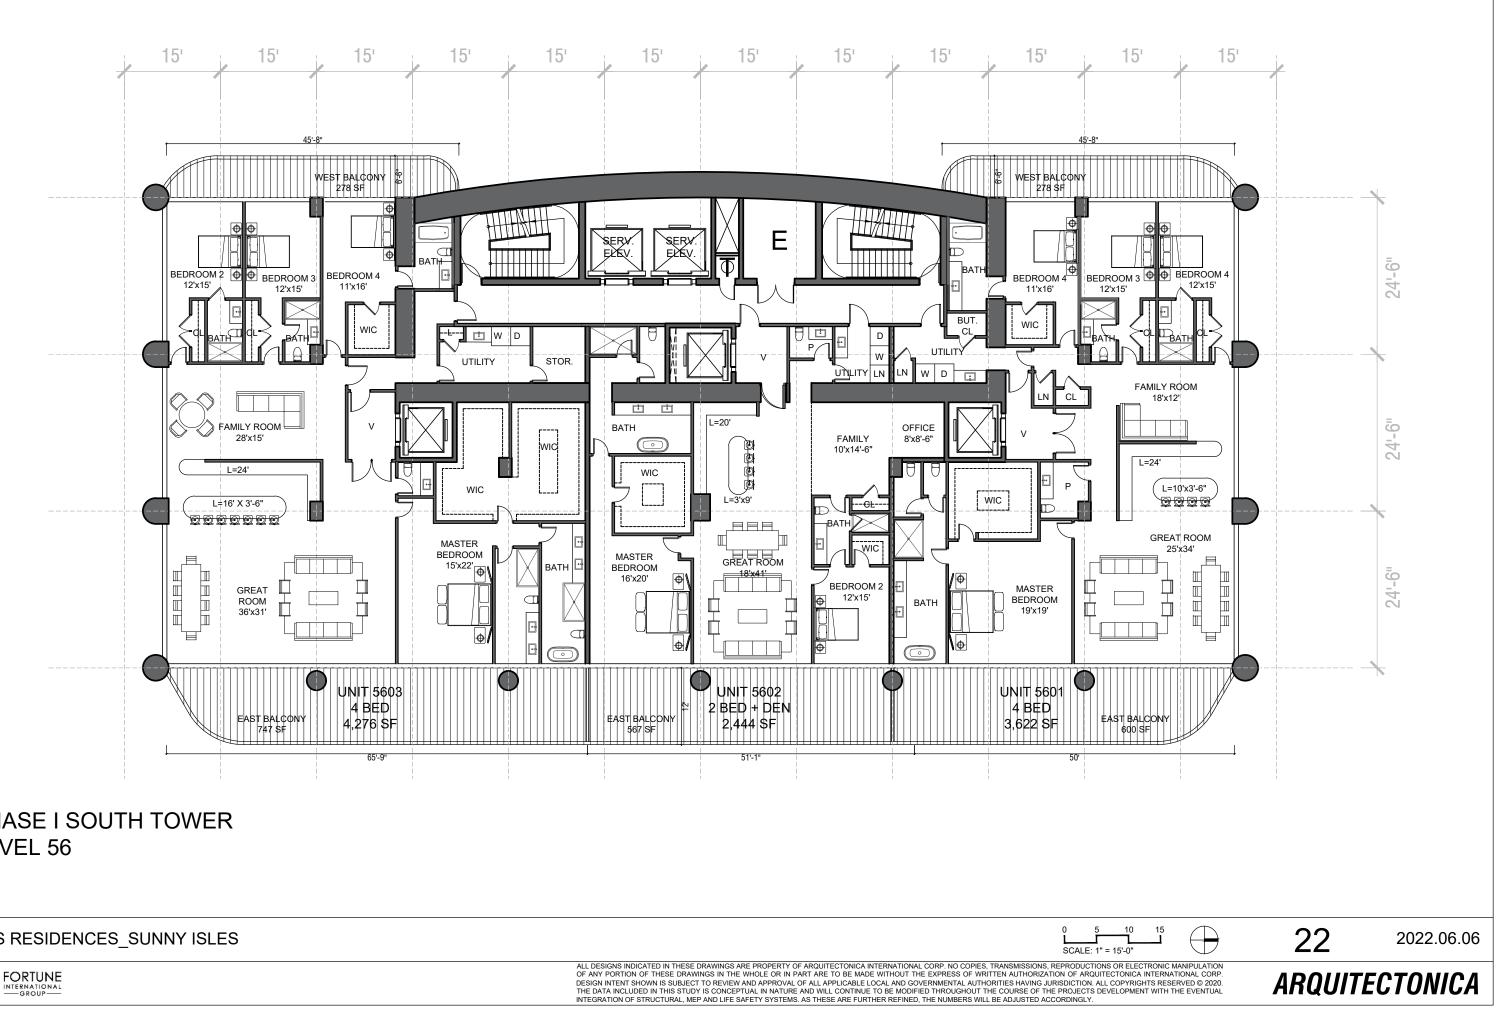




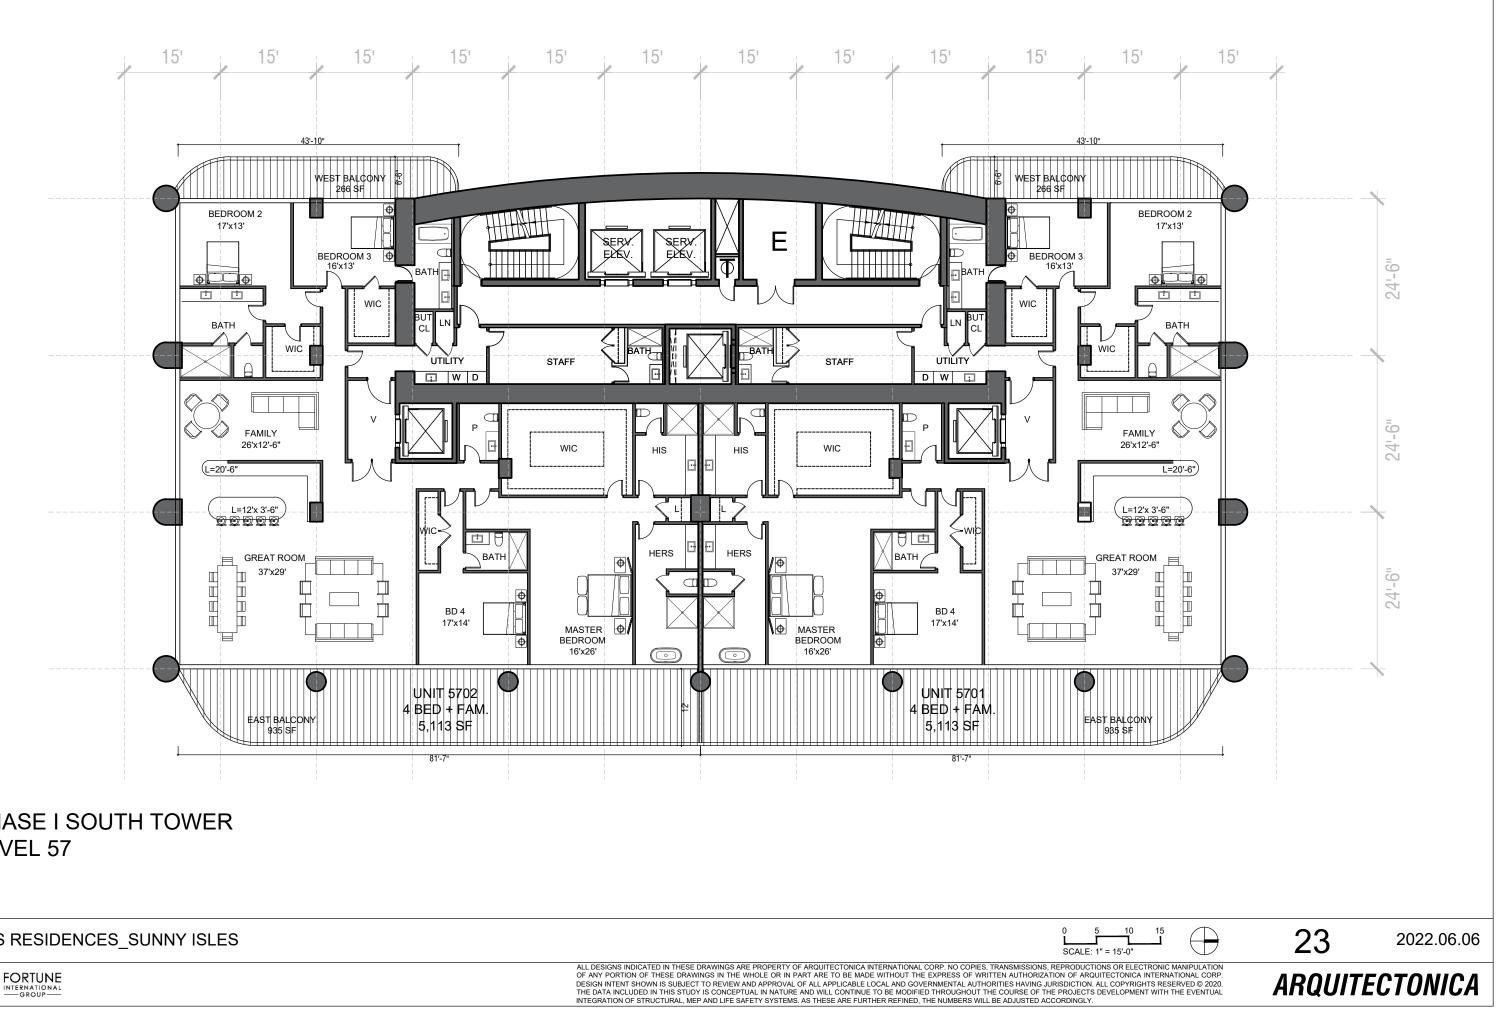




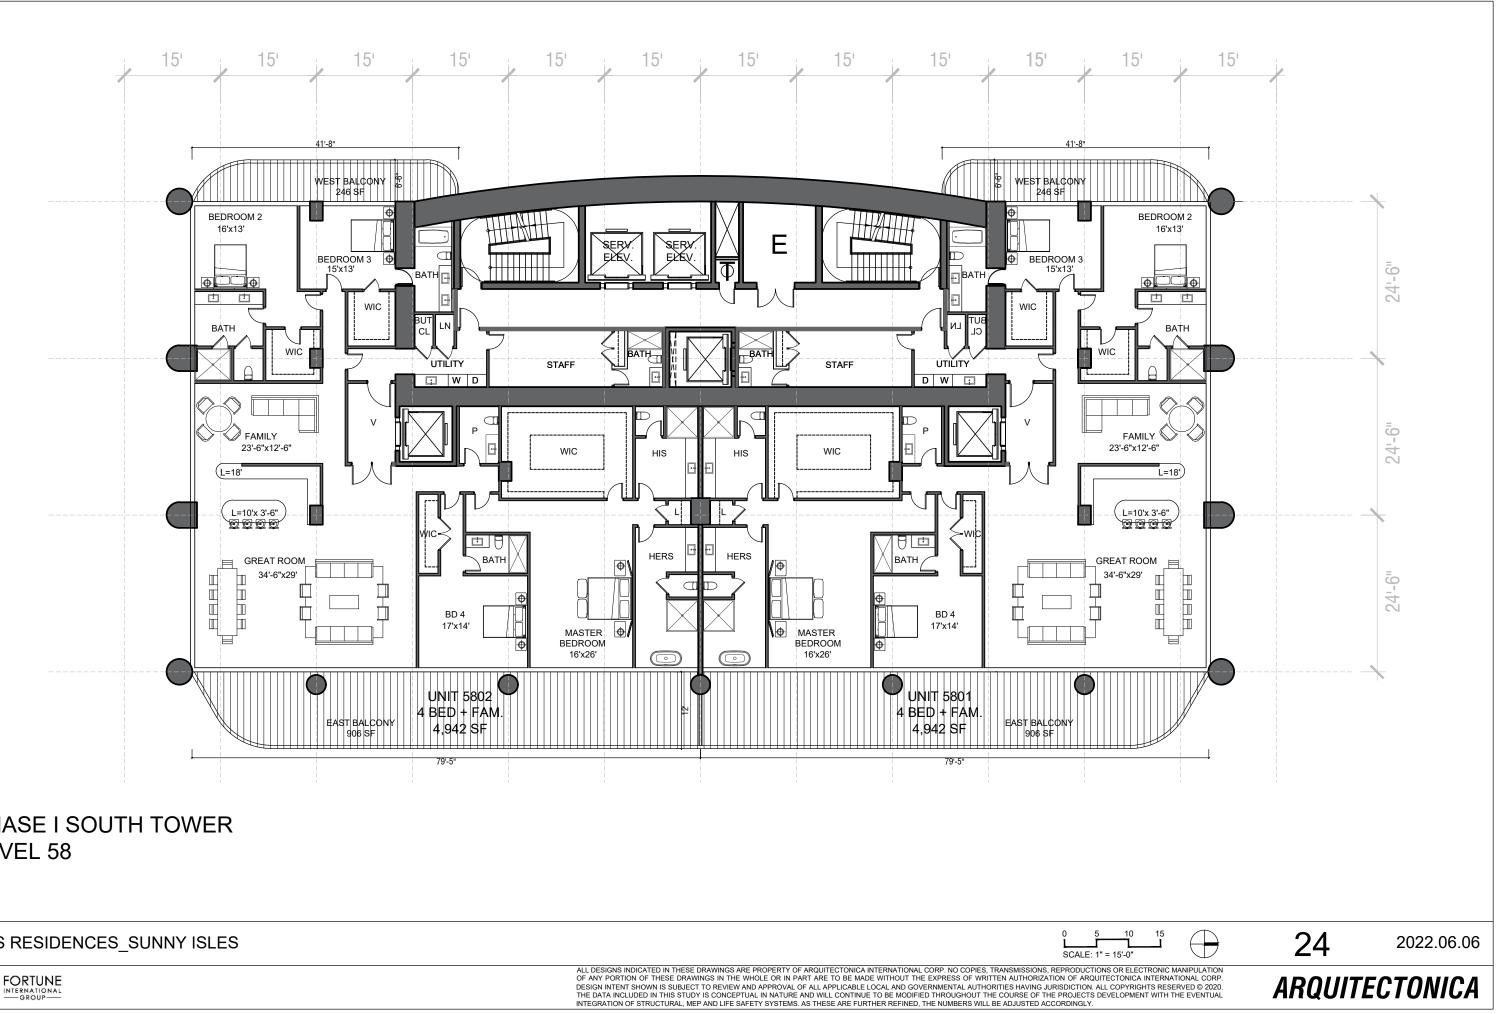



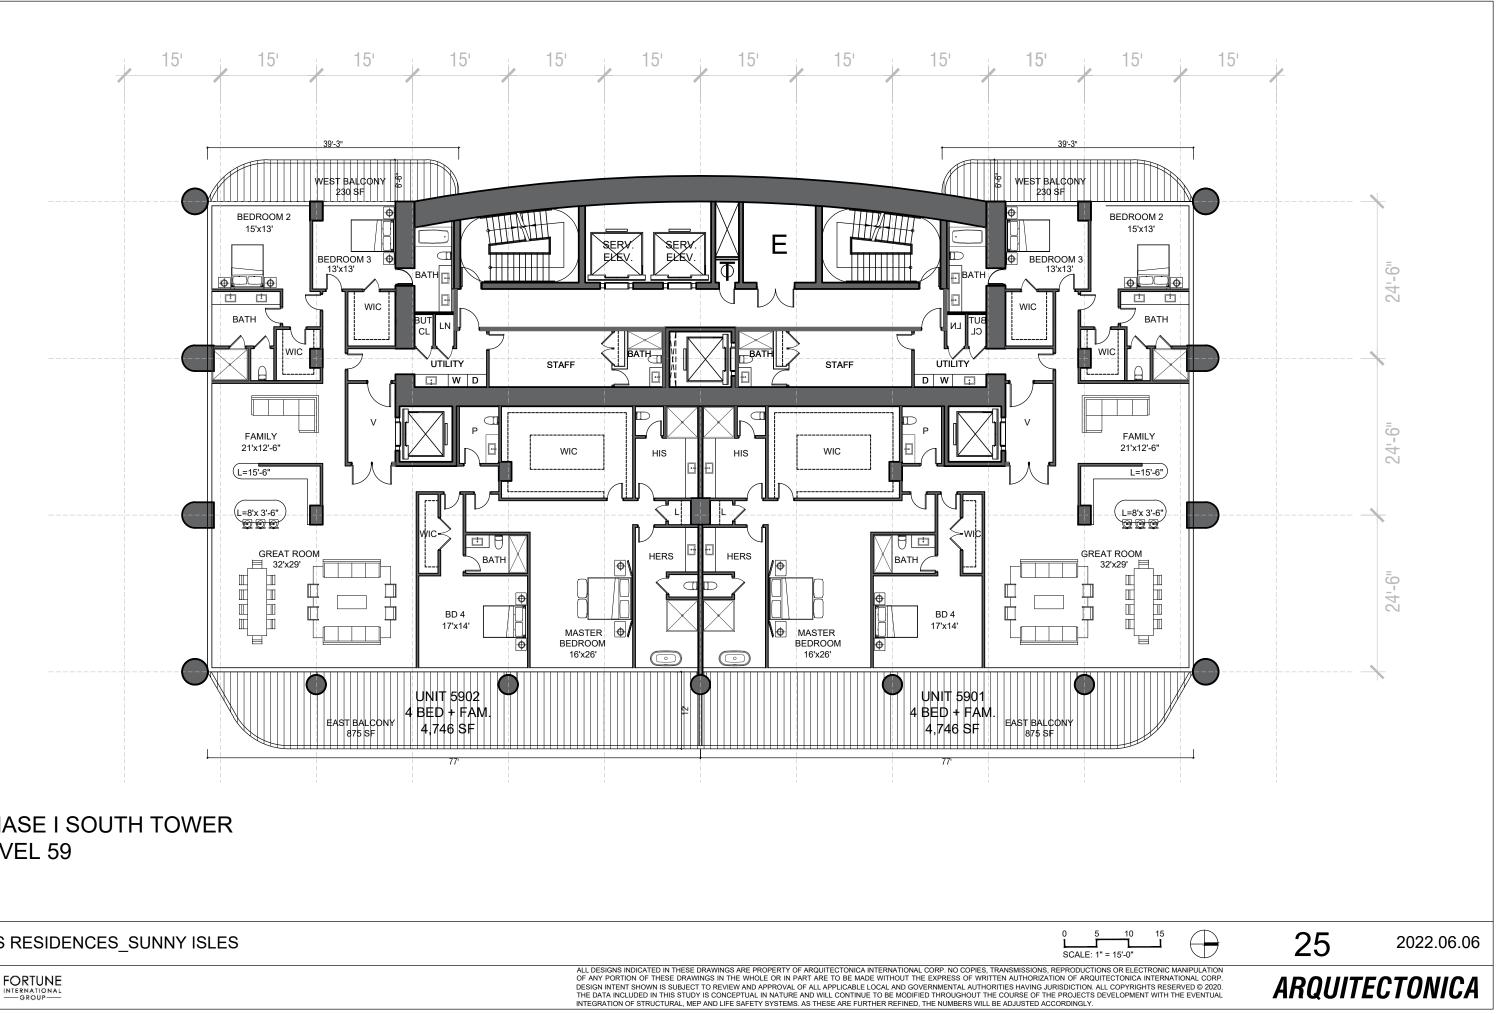




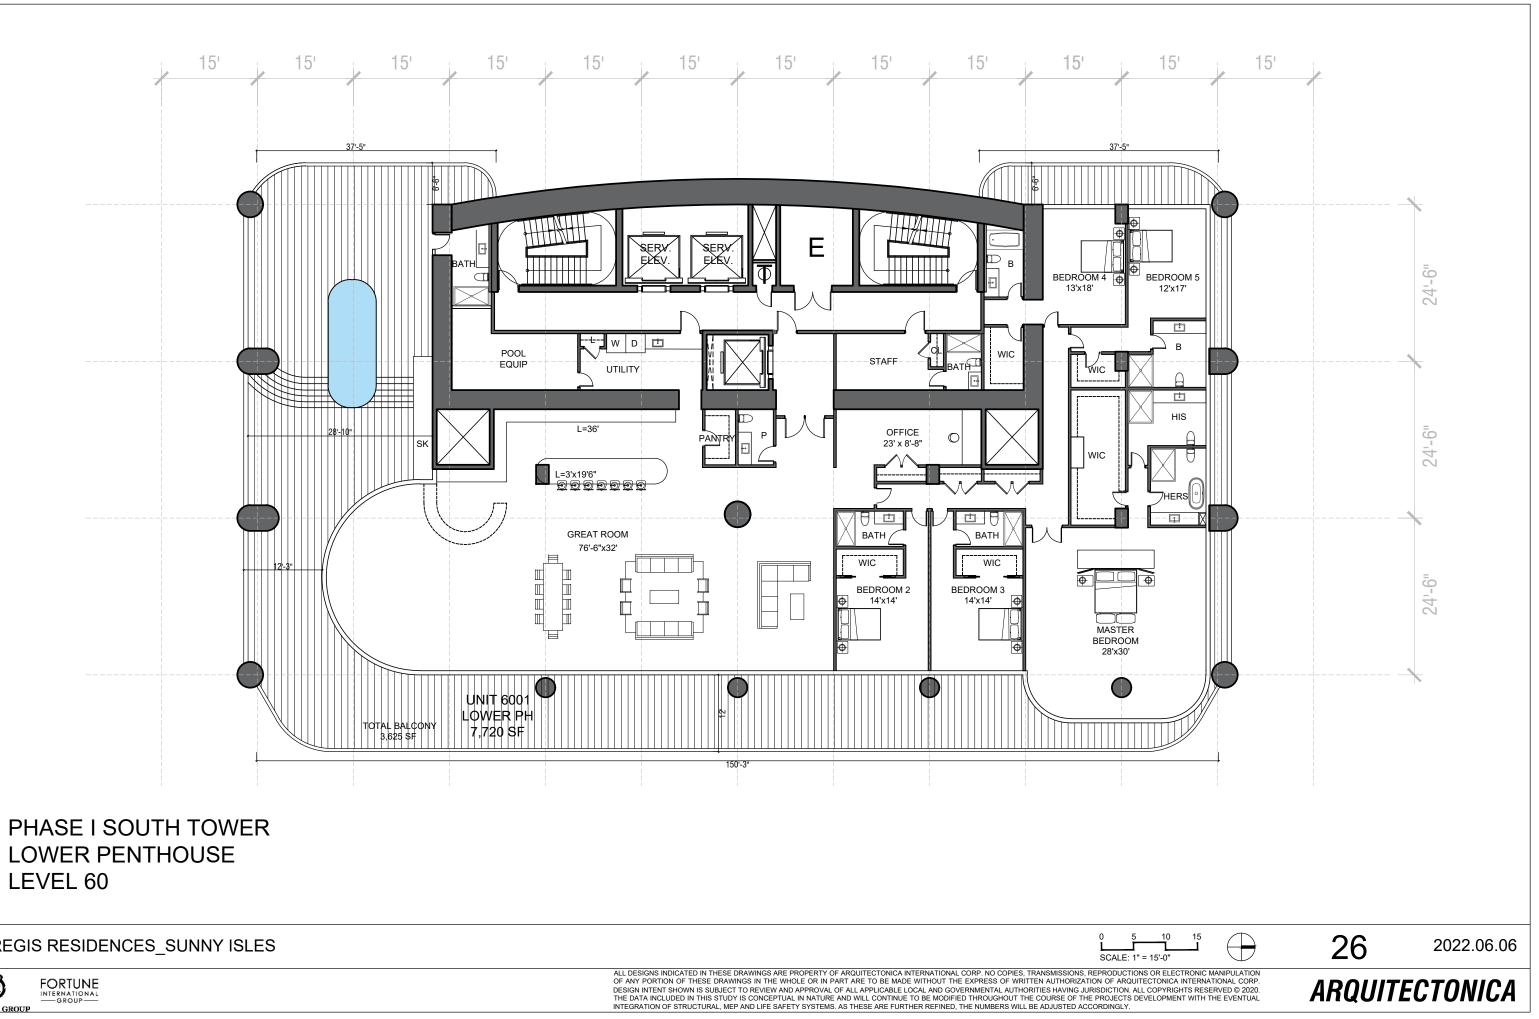

LEVEL 60



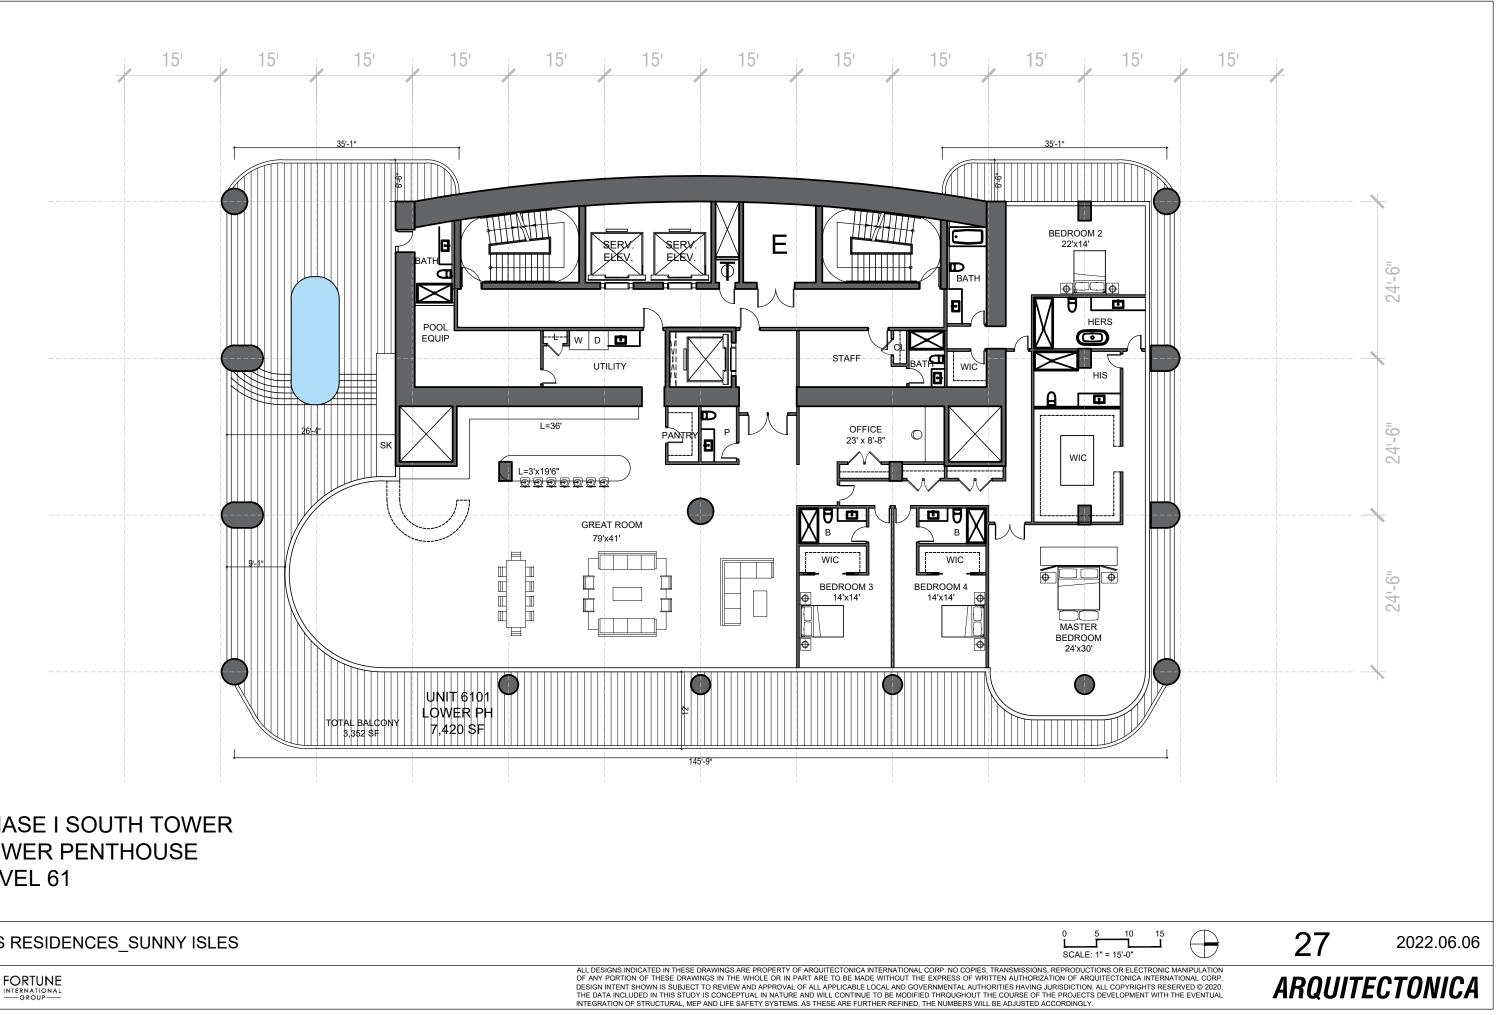

PHASE I SOUTH TOWER LOWER PENTHOUSE LEVEL 61



